



User Manual

Wireless Keyboard BK10 Pro

English

Thank you for purchasing this iClever wireless keyboard. Please read this user manual carefully before use and keep it for future reference.

Package Contents

- 1 x Keyboard
- 1 x USB-A to USB-C Charging Cable
- 1 x User Manual

Quick Start Guide

Tip: Before first use, charge the keyboard for about 2 hours.

1. First-Time Bluetooth Pairing

Step 1: Power On the Keyboard
Move the power switch to "ON."

Step 2: Enable Bluetooth on Your Device
Go to **Settings > Bluetooth** and turn Bluetooth on.

Step 3: Enter Pairing Mode on the Keyboard
Press **[01]** once to switch to Bluetooth channel 1.

Press and hold **[01]** for 5 seconds to enter pairing mode for that channel. The Bluetooth indicator will flash rapidly.

Step 4: Complete Pairing

On your device, select "iClever BK10 Pro" from the Bluetooth list to connect.

Finding the Pairing Name "iClever BK10 Pro"

Device Type	Steps
Windows 10/11 (PC, laptop, tablet)	Open Settings > Devices > Bluetooth & other devices > Add Bluetooth or other device > Bluetooth > Select "iClever BK10 Pro" from the list and select Pair .
macOS (Mac)	Go to System Preferences > Bluetooth . Select "iClever BK10 Pro" from the list and select Pair .
iOS/Android (iPhone, iPad, Smartphone)	Open Settings > Bluetooth . Select "iClever BK10 Pro" from the list to connect.

2. Pair with Multiple Devices

The keyboard supports up to three Bluetooth devices, allowing quick switching between multiple devices.

- Press **[01] / [02] / [03]** once to switch to Bluetooth channel 1 / 2 / 3.
- Press and hold the same key for 5 seconds to enter pairing mode for that channel.

- Each channel can store one device only.
- Pairing a new device will replace the previous device on that channel.

3. Switch Between Connected Devices

Press **[01] / [02] / [03]** once to switch between previously paired devices. The keyboard automatically reconnects to the selected device.

Troubleshooting Tips

1) Cannot find the device name?

- Ensure the keyboard is in pairing mode and the indicator light is flashing rapidly.
- Confirm that Bluetooth is enabled and discoverable on your device.
- Restart both the keyboard and your Bluetooth device if needed.
- The keyboard may automatically reconnect to the last-used device.

2) Connected but not typing?

Check that the keyboard is switched to the correct Bluetooth channel.

3) Frequent disconnections

- Move the keyboard closer to your device.
- Avoid signal interference from Wi-Fi routers, microwaves, speakers, or metal surfaces.

Additional Notes

The Bluetooth pairing name may appear as a generic "Keyboard" icon on some devices.

Backlight Control

By default, the backlight is turned off.

Press the **brightness key (F6)** to turn on the backlight before changing colors. On **Windows**, press **Fn + F6**. On **macOS, iOS, and Android**, press **F6** directly.

Backlight Key Operations

Windows	macOS / iOS / Android
Fn + F5: Change backlight color Fn + F6: Adjust backlight brightness	F5: Change backlight color F6: Adjust backlight brightness

Backlight Options

- 7 backlight color options
- Brightness levels: **Low / Medium / High / Backlight OFF**

Backlight Off

- After reaching **High brightness**, press the **brightness key (F6)** once more to turn off the backlight.
- On **Windows**, press **Fn + F6**.
- This is the only way to turn off the backlight manually.

Auto-Off & Power Saving

- The backlight turns off automatically after **30 seconds** of inactivity.
- Press any key to wake the backlight.
- The keyboard enters sleep mode after **2 hours** of inactivity.
- Press any key to wake the keyboard.

Battery Life Notes

- Battery life varies depending on backlight brightness, color, and usage patterns.
- Continuous use at maximum brightness may reduce battery life.
- Actual battery performance may vary based on environment and settings.

Keys and Functions

On Windows, the F1–F12 keys function as standard function keys by default. On macOS, iOS, and Android, the F1–F12 keys function as system and media keys by default (e.g. brightness, volume, backlight).

Key/Function	Mac OS	iOS/Android	Windows	Windows
Function Access	Direct Access	Direct Access	Fn + Function Key	Direct Access
[F1]	Brightness -	Brightness -	Brightness -	F1
[F2]	Brightness +	Brightness +	Brightness +	F2
[Mission Control]		Home	Web Browser	F3
[Search]	Search	Search	Search	F4
[Change Backlight Color]	Change Backlight Color	Change Backlight Color	Change Backlight Color	F5
[Adjust Backlight Brightness]	Adjust Backlight Brightness	Adjust Backlight Brightness	Adjust Backlight Brightness	F6
[Previous track]	Previous track	Previous track	Previous track	F7
[Play/pause]	Play/pause	Play/pause	Play/pause	F8
[Next track]	Next track	Next track	Next track	F9
[Mute]	Mute	Mute	Mute	F10
[Volume -]	Volume -	Volume -	Volume -	F11
[Volume +]	Volume +	Volume +	Volume +	F12

Special Keys and Functions

Press **Fn + Esc** to toggle Fn Lock.
• Windows: F1–F12 work as standard function keys by default.
• macOS / iOS / Android: F1–F12 work as media keys by default.
When Fn Lock is enabled, the key behavior is reversed. Press **Fn + Esc** again to restore the default behavior.

The Fn key is used with other keys to access special functions and shortcuts.


The keyboard supports up to 3 Bluetooth devices.
• Press **[01] / [02] / [03]** once to switch between paired devices.
• Press and hold **[01] / [02] / [03]** for 5 seconds to enter pairing mode.
• Each Bluetooth key stores one device only.
Pairing a new device will replace the previously stored device on that channel.

Press the screenshot key once to capture the screen.

System Shortcut Keys

[Win opt key]	Acts as Win on Windows/Android, and Option on macOS/iOS
[alt cmd key]	Acts as Alt on Windows/Android, and Command on macOS/iOS
[Num Lock clear]	Acts as Num Lock on Windows/Android, and Clear on macOS

Product Overview

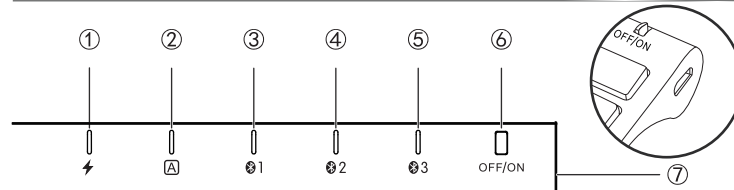

Charging Indicator (1):

- **Red light:** Charging in progress.
- **Green light:** Fully charged (approximately 2 hours).

Caps Lock Indicator (2):

Press the "Caps Lock" key to toggle between uppercase and lowercase.

Blue light: Caps Lock is active (uppercase).

Note: On macOS, Caps Lock behavior may vary depending on system settings or input method settings.

Bluetooth & Low Battery Indicators (3 / 4 / 5)

- **Bluetooth Channel Indicator:** ③④⑤ light up for 3 seconds when the keyboard powers on.

Low Battery Indicator:

When the battery level drops below 10%, the ③④⑤ indicator will keep flashing.

Power Switch (6): Slide to **ON** to power on and **OFF** to power off.

Charging Port (7): USB-C port for charging the keyboard.

Charge the Keyboard

Input: **DC 5V/500mA**. If the charging voltage exceeds 7V, the keyboard will automatically stop charging to protect the battery.

English: The power supplied by the charger must be between a minimum of 1 watt and a maximum of 5 watts to achieve the maximum charging speed.
Français: La puissance fournie par le chargeur doit être comprise entre un minimum de 1 watt et un maximum de 5 watts pour atteindre la vitesse de charge maximale.

Specifications

Connection Type	Bluetooth
Connected Devices	Up to 3
Layout Compatibility	Windows/Mac
Lithium Battery Capacity	800 mAh
Charge Time	Approximately 3 hours
Usage Time (Backlit on)	5 - 30 hours
Usage Time (Backlit off)	Up to 720 hours (approx. 90 days)
Backlight Colors	7 colors
Backlight Brightness	3 levels
Auto Sleep	2 hours (after inactivity)
Material	ABS housing + metal bottom plate
Keys Structure	Laptop-style scissor switches

Notes:

- Usage time is measured under a full charge.
- Backlit usage time (5–30 hours) varies depending on backlight color, brightness level, and usage patterns.
- Maximum brightness with white backlight consumes the most power.
- Frequency Band: 2402 MHz – 2480 MHz
- Maximum Transmission Power: -15 dBm

System Requirements

- Windows: 10, 11, or later (PC / Laptop / Tablet)
- macOS: 10.15 or later (Mac / iMac)
- iPadOS: 14 or later (iPad)
- Android: 8.0 or later (Smartphone / Tablet)

Compatibility Notes:

Compatibility may vary when using Bluetooth adapters or non standard Bluetooth environments (e.g., some desktop computers or smart TVs).

FAQ

Q1. Bluetooth Connection Issues

(Cannot connect, reconnect, or frequent disconnections)
If Bluetooth connection issues occur, try the steps below:

1. Check the Bluetooth Channel
Make sure the keyboard is switched to the correct Bluetooth channel.

2. Wake the Keyboard
Press any key and wait a few seconds for the keyboard to reconnect.

3. Restart Bluetooth on Your Device

Turn Bluetooth off and on again on your computer or mobile device.

4. Restart the Keyboard

Slide the power switch to OFF, wait a few seconds, then turn it ON again.

5. Remove and Reconnect the Keyboard

Remove the keyboard from the Bluetooth list on your device, then reconnect it.

6. Check Power or Sleep Settings

Some systems may disable Bluetooth after sleep or hibernation.

Wake your device and allow a few seconds for Bluetooth to reconnect.

Q2. Delay When Typing or Input Lag

If you experience typing delay or lag:

1. Move the keyboard closer to your device.
2. Avoid signal interference from Wi-Fi routers, microwaves, speakers, or metal surfaces.
3. Make sure no heavy background tasks or system updates are running.
4. Update your operating system to the latest version.

Q3. Keys Not Responding or Typing Incorrectly

If some keys do not respond, repeat characters, or behave unexpectedly:

1. Turn off the keyboard and disconnect it from Bluetooth.
2. Gently clean the keyboard surface and key gaps.
3. Make sure no liquid, dust, or debris is present around the keys.
4. Turn the keyboard back on and reconnect it.

Note:

Liquid spills or debris inside the keyboard may affect key performance.

Q4. Can't charge or hold the charge

- Try a different USB port.
- Make sure the charger output voltage does not exceed 7V.
- Check the charging indicator:
 - Red = Charging, Green = Fully charged
- Connect the charging cable directly to a USB port on your computer.

Q5. How do I enable direct access to F-keys?

By default, the keyboard provides access to the F-keys. To switch to direct access for media and hotkeys (e.g., Volume Down, Volume Up, Play/Pause), press **Fn + Esc** to toggle between modes.

Backlight FAQ

Q6. Why doesn't the backlight turn on?

- By default, the backlight is turned off.
- Press the brightness key (F6 / Fn + F6 on Windows) to turn on the backlight.
- Backlight color can only be changed after the backlight is turned on.
- Make sure the keyboard has sufficient battery power.

Q7. Why does the backlight turn off automatically?

- Backlight turns off after 30 seconds of inactivity to save power.
- Press any key to wake the backlight.
- This is a normal power-saving feature and does not indicate a malfunction.

Q8. Why is the backlit usage time shorter than expected?

- Backlit usage time varies by color, brightness level, and usage patterns.
- White backlight or maximum brightness consumes more power.

Q9. Why can't I change the backlight color?

- Make sure the backlight is turned on before changing colors.
- Press the color key (F5 / Fn + F5 on Windows) to switch backlight colors.
- If the backlight is turned off, color switching will not work.

Warranty & Contact

This product comes with a 12-month limited warranty from the date of purchase. If you have any questions or need assistance, please contact us at support@iclever.com



Manuel d'utilisation

Clavier sans fil BK10 Pro

Français

Merci d'avoir choisi le clavier sans fil iClever. Veuillez lire attentivement ce manuel avant utilisation et le conserver pour référence ultérieure.

Contenu de l'emballage

- 1 x Clavier
- 1 x Câble de charge USB-A vers USB-C
- 1 x Manuel d'utilisation

Guide de démarrage rapide

1. Appairage Bluetooth initial

Étape 1 : Allumer le clavier

Faites glisser l'interrupteur sur ON.

Étape 2 : Activer le Bluetooth

Allez dans Paramètres > Bluetooth et activez le Bluetooth.

Étape 3 : Mode d'appairage

Appuyez une fois sur **[01]** pour sélectionner le canal Bluetooth 1.

Appuyez sur **[01]** pendant 5 secondes pour entrer en mode d'appairage.

Le voyant Bluetooth clignote rapidement.

Étape 4 : Connexion

Sélectionnez « **iClever BK10 Pro** » dans la liste Bluetooth de votre appareil.

2. Appairer plusieurs appareils

Le clavier peut mémoriser jusqu'à 3 appareils Bluetooth.

- Appuyez une fois sur **[01] / [02] / [03]** pour sélectionner le canal 1 / 2 / 3.
- Maintenez la touche 5 secondes pour appairer un nouvel appareil.
- Chaque canal mémorise un seul appareil.
- Un nouvel appairage remplace l'appareil précédent sur ce canal.

3. Passer d'un appareil connecté à un autre

Appuyez une fois sur **[01] / [02] / [03]** pour passer d'un appareil appairé à un autre. Le clavier se reconnecte automatiquement.

Contrôle du rétroéclairage

Par défaut, le rétroéclairage est désactivé.

Appuyez sur la touche de luminosité pour l'activer avant de changer la couleur.

Commandes du rétroéclairage

Windows:	macOS / iOS / Android:
Fn + F5 : changer la couleur Fn + F6 : régler la luminosité	F5 : changer la couleur F6 : régler la luminosité

Options

- 7 couleurs de rétroéclairage
- Luminosité : Faible / Moyenne / Élevée / Désactivé

Désactiver le rétroéclairage

- Après le niveau Élevé, appuyez à nouveau sur la touche de luminosité pour éteindre le rétroéclairage.
- C'est la seule méthode de désactivation manuelle.

Économie d'énergie

- Le rétroéclairage s'éteint automatiquement après 30 secondes d'inactivité.
- Appuyez sur une touche pour le rallumer.
- Le clavier passe en veille après 2 heures d'inactivité.

Remarques sur l'autonomie

- L'autonomie dépend de la luminosité, de la couleur et de l'utilisation.
- Une luminosité maximale réduit l'autonomie.

Les performances réelles peuvent varier selon l'environnement et les réglages.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IC Caution

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'entraîner un fonctionnement.