



## Tri-folding Wireless Keyboard with Touchpad

IC-BK08

## User Manual

Thank you for choosing iClever! Please read this user manual carefully and save it for future reference.

### Package Contents


- 1 x Foldable Keyboard
- 1 x USB-C Charging Cable
- 1 x Carrying Bag
- 1 x Stand Holder for Smartphone/Tablet
- 1 x User Manual

### Specifications

Bluetooth Version	Bluetooth 5.1
Unfolded Dimensions	278*90*6 mm / 10.94*3.54*0.23 in
Folded Dimensions	159*90*18 mm / 6.25*3.54*0.70 in
Touchpad Dimensions	55*45 mm / 2.16*1.81 in
Operating Range	<10 meters
Net Weight	220g / 7.76oz
Connected Devices	Up to 3
Charge Time	<2 hours
Uninterrupted Working Time	60 hours
Stand-by Time	>90 days
Lithium Battery Capacity	210 mAh
Key Life	3 million clicks
Material	ABS(front side), aluminum(back side)
Frequency Band	2402MHz-2480MHz
Maximum Transmission Power	0 dBm

- 1 -

### Indicator Light Descriptions

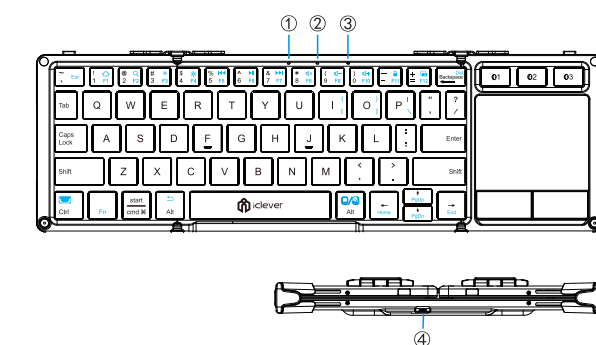

- Power on status: indicator ①②③ will light up in blue for 3s when power on.
- Charging status: indicator ① will stay in red when charging and turn off once fully charged.
- Low Battery Status: indicator ①②③ will flash in red when it is time to charge.
- Bluetooth status: indicator ①/②/③ flash in blue when it is in Bluetooth pairing status and turn to be blue once paired successfully.
- ④Charging port: for charging.

- 2 -

### Pairing Instructions

- Preparation to pair:**
- On your device, delete/forget all the Bluetooth records.
  - On your device, turn Bluetooth off, then turn it on.

#### A. Pairing with devices:

##### Pairing with 1<sup>st</sup> device

- Step 1: Unfold the keyboard to power it on, ①②③ indicator will turn to be blue for 3s.
- Step 2: Hold and press key of ① for 5 seconds to enter pairing mode in channel 1 until the indicator ① flash blue quickly.
- Step 3: On your device, under Bluetooth, find the Bluetooth name "iClever IC-BK08 Keyboard" and click to connect.

##### Pairing with 2<sup>nd</sup> device

- Step 1: Hold and press key of ② for 5 seconds to enter pairing mode in channel 2 until the indicator ② flash blue quickly.
- Step 2: On your device, under Bluetooth, find the Bluetooth name "iClever IC-BK08 Keyboard" and click to connect.

##### Pairing with 3<sup>rd</sup> device

- Step 1: Hold and press key of ③ for 5 seconds to enter pairing mode in channel 3 until the indicator ③ flash blue quickly.
- Step 2: On your device, under Bluetooth, find the Bluetooth name "iClever IC-BK08 Keyboard" and click to connect.

- 3 -

#### B. Switch among connected channel.

Press ① / ② / ③ to switch to the channel that has been connected.

#### C. Re-pair the channel that has already been connected

Hold and press key of ① / ② / ③ for 5s, it will enter pairing mode again. On your device find the Bluetooth name "iClever IC-BK08 Keyboard" and click to connect.

#### Note:

Re-connections functions: unfold the keyboard, it will connect with the last used device automatically.

#### Connect with iClever Bluetooth Keyboard in different system:

- For Windows 10: Click Win > Setting > Devices > Bluetooth & other devices > Add Bluetooth or other device > Bluetooth > Click "iClever IC-BK08 Keyboard" to connect.
- For MacBook/iMac: Click System Preferences > Bluetooth > Click "iClever IC-BK08 Keyboard" to connect.
- For iPad/iPhone: Click Setting > Bluetooth > Click "iClever IC-BK08 Keyboard" to connect.

- 4 -

### Function Keys

The table below describes special key combinations for different operating systems.

Functions Keys	iOS	Android	Windows	Mac OS	Windows
Way to use	Press Fn +	Press Fn +	Press Fn +	Press Fn +	Press Fn+Shift+
	Home	Home	Web browser	Mission Control	F1
	Search	Search in browser or N/A	Search	Search	F2
	Lightness -	Lightness - (win10)	Lightness -	Lightness -	F3
	Lightness +	Lightness + (win10)	Lightness +	Lightness +	F4
	Previous track	Previous track	Previous track	Previous track	F5
	Play/pause	Play/pause	Play/pause	Play/pause	F6
	Next track	Next track	Next track	Next track	F7
	Mute	Mute	Mute	Mute	F8
	Volume -	Volume -	Volume -	Volume -	F9
	Volume +	Volume +	Volume +	Volume +	F10
	Screen lock	Screen lock	Screen lock	N/A	F11
	Screenshot	Screenshot	Screenshot	Screenshot	F12
	Esc or N/A	Esc or N/A	Esc	Esc	N/A
	Forward delete	Forward delete	Delete	Forward delete	N/A

- 5 -

Special Key	Description
	Switching function: press to switch to channel 1. Pairing function: hold and press this key for 5s to enter pairing mode.
	Switching function: press to switch to channel 2. Pairing function: hold and press this key for 5s to enter pairing mode.
	Switching function: press to switch to channel 3. Pairing function: hold and press this key for 5s to enter pairing mode.
	Under English(US) input method, press  + , the "T" can be typed out; press  +  +this key, the "T" can be typed out.
	Under English(US) input method, press  + , the "O" can be typed out; press  +  +this key, the "O" can be typed out.
	Under English(US) input method, press  + , the "P" can be typed out; press  +  +this key, the "P" can be typed out.
	This key is combination used with blue color key to perform special function.
	This key work as "start" or "Win" under Windows, and it work as "command" under iOS and Mac OS.
	Press fn + ctrl to work as "keyboard display" under iOS.
	Press fn + right alt to turn on/off the touchpad.
	Press fn + left alt to work as "back" under Android System.
	Press fn + home to work as home in web browser.
	Press fn + end to work as home in web browser.
	Press fn + end to work as page up in web browser.
	Press fn + end to work as page down in web browser.

- 6 -

### Touchpad Function

	Windows	Android
	Mouse left button	Mouse left button
	Move mouse pointer	Move mouse pointer
	Left button to select target to drag	Left button to select target to drag
	Mouse right button	Back
	Vertical, horizontal scroll	N/A
	Zoom In/Out	N/A

Note: under Android device, the left button work as mouse left button, but right button work as function of back.

### Touchpad Compatibility

- Support Android, Windows, Mac OS
- Do not support on iPhone.
- Support part of iPad model: 12.9-inch iPad Pro, 11-inch iPad Pro, 10.5-inch iPad Pro, 9.7-inch iPad Pro, iPad (5/6/7th generation), iPad mini (5th generation), iPad mini 4, iPad Air (3rd generation), iPad Air 2, and so on.


- 7 -

### Touchpad Guide in iPad

- Pair iClever keyboard with iPad.
- On the iPad, Accessibility > Touch > Assistive Touch (Choose ON) To redefine the left and right button, please do as below: Accessibility > Touch > Assistive Touch > Custom Actions

### Balance Stand

Balance stand is used for keeping keyboard balance on the desk.

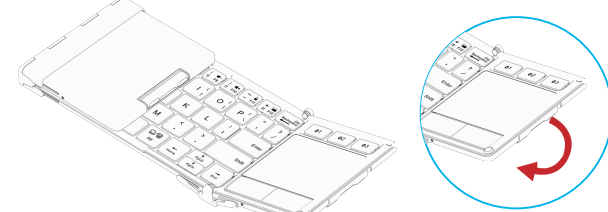

### Power Saving Mode

The keyboard will enter sleep mode after being idle for 30 minutes. To activate it by pressing any key and wait for 3s (the activation may lead a typing delay in 3s).

### Charge the Keyboard

Connect the keyboard with compute port/charging adapter (charging adapter is not included)

- 8 -

### FAQ

#### Q. Delay when typing, stop working, and frequently get disconnected.

- Restart your Bluetooth device.
- Charge the keyboard for 2 hours.
- Make sure that your iClever device and computer are within close proximity of each other.
- Try moving away at least 8 inches from:
  - Any device that could emit wireless waves: Microwave, cordless phone, baby monitor, wireless speaker, WiFi router
  - Computer power supplies, Metal or metal wiring in the wall
- Do not use your wireless keyboard on metal surfaces.
- Check if there are any updates running in the background.
- Check your computer memory, insufficient memory may cause the delay.
- Try on a different APP/device to connect or email us.

#### Q. How to fix keyboard typing multiple letters on Windows10?

Click win key > Settings > Ease of Access > Keyboard > find "Use Filter Keys", turn it on.

#### Q. How to fix keyboard typing multiple letters on Mac?

1. On a Mac, choose the Apple menu > "System Preferences", click "Keyboard", and choose the Keyboard tab.

#### Q. Touchpad does not work.

- Press "fn" + right "Alt" keys to turn on/off the touchpad function.
- The touchpad may not work for iPhone, Mac mini, Samsung Smart TV, Bluetooth adapter, and Nokia phones.

- 9 -

#### Q. My keyboard fails to connect by Bluetooth mode.

- Charge the keyboard for 2 hours.
- Make sure that your iClever device and computer are within close proximity of each other.
- Try moving away at least 8 inches (20 cm) from metal and other sources of wireless signal.
- Delete all the Bluetooth connection records. *(For example for iPad, click "Settings" > "Bluetooth" > under "MY DEVICE" to delete all the Bluetooth connection records)*
- On your device, turn off the Bluetooth and turn it on again to Refresh. *(For example for iPad, click "Settings" > "Bluetooth" > if the on-screen switch beside Bluetooth currently shows as ON, tap it twice to refresh it)*
- Connect it again or email us.

### Safety Instructions

- Keep the keyboard away from sharp objects that could damage it.
- Do not put heavy objects on the keyboard.
- Please do not spill coffee, tea or other liquids on the keyboard.

### Contact

For more questions, please contact us by support@iclever.com

- 10 -

### FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

- 11 -



## Clavier sans fil à trois volets avec pavé tactile

IC-BK08

## Manuel de l'Utilisateur FR

### Prise en main rapide

- Étape 1. Maintenez et appuyez sur la touche ① ② ③ pendant 5 secondes pour accéder au mode d'appairage sur le canal 1/2/3 ; l'indicateur de canal Bluetooth clignotera en bleu et commencera à rechercher le périphérique Bluetooth disponible.
- Étape 2. Sur votre appareil Bluetooth, recherchez le nom Bluetooth «iClever IC-BK08 Keyboard» et cliquez pour le connecter.

\*Bande de fréquence: 2402MHz-2480MHz  
 \*Puissance de transmission maximale : 0 dBm

### IC Caution

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.