



## 2.4G Keyboard

IC-GK20

## User Manual

Thank you for choosing iClever! Please read this user manual carefully and save it for future reference.

### Package Contents

- 1 x Keyboard
- 1 x USB-C Charging Cable
- 1 x USB Receiver
- 1 x User Manual

### Specification of Keyboard

Dimensions	430 x 125 x 16.2mm / 16.9 x 4.9 x 0.64in
Operating Range	< 10 m / 32.8 ft
Charge Time	< 2 hours (USB-C Charging)
Uninterrupted Work Time	> 250 hours
Key Life	3 million clicks
Standby Time	>365 days
Frequency Band	2405 MHz ~ 2470 MHz
Maximum Transmission Power	0 dbm

### Device Requirements

 
Windows 7,8,10 or later, macOS 10.13 or later

Note:

1. It is not fully compatible with Mac mini, smart TV, and XBOX.
2. If your Mac is USB-C port, please connect Receiver by USB-C Side.


-1-

### Product Overview for Keyboard

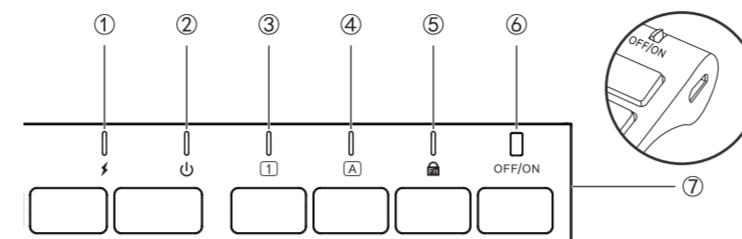

- ① **Charging Indicator:** stay in red when charging, and turn green after fully charged (about 2 hours fully charged).
- ② **Power Indicator:** the indicator will be on for 3s when power on the keyboard.
- ③ **Numeric Indicator:** press "numlk" key to turn on/off the number lock function (not work for Mac).
- ④ **Caps Lock Indicator:** press "caps lock" key to turn on/off the caps lock function. When the indicator is on, works as uppercase.
- ⑤ **Fn Lock Indicator:** press [Fn] to turn on/off the fn lock function. When the indicator is on, F1-F12 keys work as media function.
- ⑥ **Power Switch:** move right to turn on and left to turn off the keyboard.
- ⑦ **Charging Port:** for charging.

### USB Receiver

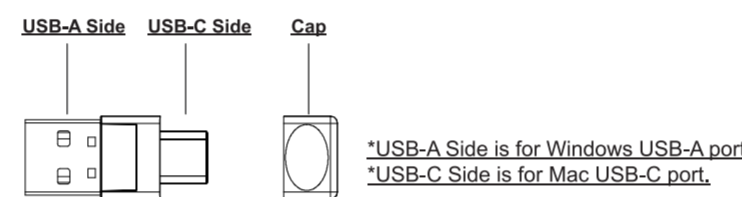 

-2-

### Pairing Instructions

#### For Windows users:

 
- Step 1. Charge the keyboard for 2 hours.
- Step 2. Plug the Receiver USB-A side into the USB-A port of the computer.



- Step 3. Move the keyboard power switch to "ON" to power on.
- Step 4. Press "Fn" + "W" to Windows layout.

#### For Mac users:

- Step 1. Charge the keyboard for 2 hours.
- Step 2. Remove the cap of USB Receiver and plug the Receiver USB-C side into the USB-C port of the Mac.



- Step 3. Move the keyboard power switch to "ON" to power on.
- Step 4. Press "Fn" + "Q" to Mac layout.

**NOTE: if you restart the keyboard, the keyboard will be back to Windows Layout.**

### Power Saving

The keyboard will enter power saving if idle for 10 minutes. Press any key and wait for 3s to exit power saving mode.

-3-

### Keys and Functions

Please based on your system to choose Windows/Mac layout by pressing "fn" + "Q" or "fn" + "W". (If your system is Mac OS, please press "fn" + "Q")

Key Icon	Windows	Fn on Windows	Mac OS	Fn on Mac OS
Way to use	Press F1-F12 directly	Press Fn+F1-F12	Press F1-F12 directly	Press Fn+F1-F12
	F1	Brightness - (Win10)	F1	Brightness -
	F2	Brightness + (Win10)	F2	Brightness +
	F3	Web browser	F3	Mission control
	F4	Switch Apps	F4	Switch apps
	F5	Search	F5	Search
	F6	Power checking	F6	Power checking
	F7	Previous track	F7	Previous track
	F8	Play/pause	F8	Play/pause
	F9	Next track	F9	Next track
	F10	Mute	F10	Mute
	F11	Volume -	F11	Volume -
	F12	Volume +	F12	Volume +

-4-

Special Keys	Descriptions
	Your keyboard has by default direct access to F-keys (F1-F12) If you prefer to have direct access to media and hotkeys such as mute, volume up, play/pause, and so on, simply press this key to swap them.
	Press "Fn" + "Q", the keyboard layout will be switched to Mac OS.
	Press "Fn" + "W", the keyboard layout will be switched to Windows.
	This key will work as "win" when your system is Windows; this key will work as "option" when your system is Mac OS.
	This key will work as "alt" when your system is Windows; this key will work as "command" when your system is Mac OS.
	This key will work as "number lock" when your system is Windows; this key will work as "clear" when your system is Mac OS.
	This key will work as menu function that is similar to right click of the mouse when your system is Windows. <b>Note: this function is not working for Mac OS.</b>
	This key will work as calculator when your system is Windows. <b>Note: this function is not working for Mac OS.</b>

-5-

### FAQ

#### Q. Stop working, delay when typing, keys work incorrectly.

- Restart your PC/laptop and iClever keyboard.
- Charge the keyboard for 2 hours.
- Verify the product or receiver is connected directly to the computer and not to a hub, extender, switch, or something similar.
- Move the device closer to the USB receiver. If your receiver is in the back of your computer, it may help to relocate the receiver to a front port. In some cases the receiver signal gets blocked by the computer case, causing a delay.
- Keep other electrical wireless devices away at least 8 inches from the USB receiver to avoid interference, such as Wireless speakers, Computer power supplies, Monitors, and so on.
- Check your computer memory, insufficient memory may cause the lag.
- Check if there are any updates running in the background that may cause the delay.
- Try on a different APP / USB port / computer.

#### Q. How to fix keyboard typing multiple letters on Windows 10?

Click win key > Settings > Ease of Access > Keyboard > find "Use Filter Keys", turn it on.

#### Q. How to fix keyboard typing multiple letters on Mac?

1. On a Mac, choose the Apple menu > "System Preferences", click "Keyboard", and choose the Keyboard tab.
2. Locate the "Key Repeat" slider setting and adjust it to the "Off" position.

### Tips

- Keep away from oil, chemical, liquid, and snacks.
- Keep away from sharp objects.
- Keep away from metal and other sources of wireless signal.

-6-

### FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### Contact

For more questions, please contact us by support@iclever.com

-7-



## Clavier 2.4G

IC-GK20

## Manuel de l'Utilisateur FR

### Guide d'utilisation

Pour les utilisateurs Windows :

Étape 1. Chargez le clavier pendant 2 heures.

Étape 2. Branchez le côté USB-A du récepteur dans le port USB-A de l'ordinateur.

Étape 3. Déplacez l'interrupteur d'alimentation du clavier sur « ON » pour allumer.

Étape 4. Appuyez sur « Fn » + « W » pour la mise en page Windows.

Pour les utilisateurs Mac :

Étape 1. Chargez le clavier pendant 2 heures.

Étape 2. Retirez le capuchon du récepteur USB et branchez le côté USB-C du récepteur dans le port USB-C du Mac.

Étape 3. Déplacez l'interrupteur d'alimentation du clavier sur « ON » pour allumer.

Étape 4. Appuyez sur « Fn » + « Q » pour la mise en page Mac.

\*Bande de fréquence : 2405 MHz ~ 2470 MHz  
\*Puissance d'émission maximale : 0 dBm

### IC Caution

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

-8-