



## Wireless Keyboard

BK20

## User Manual EN

Thank you for choosing iClever! Please read this user manual carefully and save it for future reference.

### Package Contents


- 1 x Keyboard
- 1 x USB-C Charge Cable
- 1 x User Manual

### Specifications

Connection Type	Bluetooth 5.0
Bluetooth Technology	Bluetooth Low Energy
Dimensions	366*122*14 mm
Connected Devices	Up to 3
Layout Compatibility	Windows/Mac
Lithium Battery Capacity	300 mAh
Charge Time	> 2.5 hours (USB-C Charge)
Uninterrupted Work Time	> 90 Days
Sleep Time	30 Minutes
Material	ABS
Key Structure	Scissor Switch
Frequency Band	2402MHz - 2480MHz
Maximum Transmission power	0 dBm
Warranty	12 Months

- 1 -

### Indicator Overview

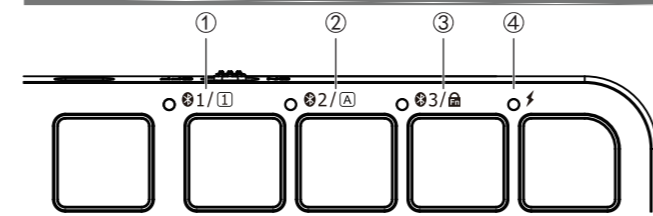

#### 1 Bluetooth 1 & Number Lock Indicator

**Bluetooth 1 Indicator:** hold and press button for 5s to pairing mode, the indicator keeps flashing in 180s.

**Number Lock Indicator:** press "numlk" to turn on/off number lock function: When the indicator is on, the numeric pad works as numbers (it may be off in Android). When the indicator is off, the numeric pad works as function under numbers.

#### 2 Bluetooth 2 & Caps Lock Indicator

**Bluetooth 2 Indicator:** hold and press button for 5s to pairing mode, the indicator keeps flashing in 180s.

**Caps Lock Indicator:** press the "caps lock" key to switch between uppercase and lowercase.

When the indicator is on, works as uppercase letters.

When the indicator is off, works as lowercase letters.

#### 3 Bluetooth 3 & Fn Lock Indicator

**Bluetooth 3 Indicator:** hold and press button for 5s to pairing mode, the indicator keeps flashing in 180s.

**Fn Lock Indicator:** press "fn" + "esc" to turn on/off the fn lock function.

When the indicator is on, fn lock is activated, F1-F12 works as Media function.

When the indicator is off, F1-F12 works as F1-F12.

#### 4 Power & Charging Indicator:

Power Indicator: power on the keyboard, the indicator will be red for 3s.  
Charging Indicator: stay in red when charging and turn green after fully charging.

- 2 -

### Guide to Use

#### A. How to pair with Bluetooth devices?

**Pair with the 1<sup>st</sup> device**

Step 1. Charge the keyboard for 2 hours.

Step 2. Slide the power switch to "ON" to power on the keyboard.

Step 3. Click once to choose channel 1, then hold and press this button for 5s to Bluetooth pairing mode until the indicator keeps flashing.

Step 4. Find the Bluetooth name "iClever BK20 KB" and click to connect it.

#### How to find BK20 in different system, please check as below:

► For Windows 10:

Click Win > Setting > Devices > Bluetooth & other devices > Add Bluetooth or other device > Bluetooth > Find "iClever BK20 KB" to connect.

► For Mac (MacBook/iMac):

Click System Preferences > Bluetooth > Click "iClever BK20 KB" to connect.

► For iOS (iPad/iPhone) and Android:

Click Setting > Bluetooth > Click "iClever BK20 KB" to connect.

#### Notes:

---the Bluetooth pairing name may be shown as "Keyboard".

---if fail to connect, please remove the "iClever BK20 KB" name from your Bluetooth list, on your device turn off the Bluetooth and turn on it again to refresh.

---keep the keyboard and your Bluetooth device in 30cm in Bluetooth pairing.

---each channel can pair with 1 device (3 channels in total).

---auto re-connect function: the keyboard will connect with the last-used device automatically.

---do not connect it via a Bluetooth adapter.

- 3 -

#### Pair with the 2<sup>nd</sup> device

Step 1. Click once to choose channel 2, then hold and press this button for 5s to Bluetooth pairing mode until the indicator keep flashing.  
Step 2. Find the Bluetooth name "iClever BK20 KB" and click to connect it.

#### Pair with the 3<sup>rd</sup> device

Step 1. Click once to choose channel 3, then hold and press this button for 5s to Bluetooth pairing mode until the indicator keep flashing.  
Step 2. Find the Bluetooth name "iClever BK20 KB" and click to connect it.

#### B. How to switch among the connected devices?

Press / / to switch between the connected devices.

#### C. How to re-pair?

Step 1. Press to choose the channel 1/2/3 you want to re-pair.

Step 2. Hold and press for 5 seconds to re-pair **AGAIN**.

Step 3. On your Bluetooth device, find the Bluetooth name "iClever BK20 KB" and click to connect it.

- 4 -

### Keys and Functions

The table below describes special key combinations for different operating systems.

Function Keys	iOS&Mac OS	Android	Windows 10	Mac OS	Windows
<b>Way to use</b>	<b>Press directly</b>	<b>Press directly</b>	<b>Press fn +</b>	<b>Press fn +</b>	<b>Press directly</b>
	Brightness -	Brightness -	Brightness -	F1	F1
	Brightness +	Brightness +	Brightness +	F2	F2
	Home-iOS Mission Control&Mac	Home or N/A	Web Browser	F3	F3
	Switch apps N/A&iPhone	N/A	Switch apps	F4	F4
	Search	N/A	Search	F5	F5
	Previous track	Previous track	Previous track	F6	F6
	Play/pause	Play/pause	Play/pause	F7	F7
	Next track	Next track	Next track	F8	F8
	Mute	Mute	Mute	F9	F9
	Volume -	Volume -	Volume -	F10	F10
	Volume +	Volume +	Volume +	F11	F11
	Screenshot	Screenshot	Screenshot	F12	F12

- 5 -

Special Key	Description
	Press "fn" + "esc" keys to turn on/off fn lock function. For Windows users, your keyboard has by default access to the F-keys. If you prefer to have direct access to Media and Hotkeys such as Volume Down, Volume Up, Play/Pause, and so on, simply press "fn" + "esc" keys to swap them.
	The "fn" key is used in combination with other keys to access special features.
	Switch function: press this key to Bluetooth Channel 1. Pairing function: hold and press it for 5 seconds, and the Bluetooth channel 1 indicator will flash blue to pairing mode.
	Switch function: press this key to Bluetooth Channel 2. Pairing function: hold and press it for 5 seconds, and the Bluetooth channel 2 indicator will flash blue to pairing mode.
	Switch function: press this key to Bluetooth Channel 3. Pairing function: hold and press it for 5 seconds, and the Bluetooth channel 3 indicator will flash blue to pairing mode.
	It works as screen lock. <b>NOTE: not works for Android device.</b>
	It works as "win" when your system is Windows. It works as "option" when your system is iOS or Mac OS.
	It works as "alt" when your system is Windows or Android. It works as "command" when your system is iOS or Mac OS.
	It works as "ctrl" when your system is Windows or Android. It works as "option" when your system is iOS or Mac OS.
	It works as "number lock" when your system is Windows and Android. It works as "clear" when your system is Mac OS. <b>NOTE: not works for iOS devices.</b>

- 6 -

### System Requirements

- iOS 9.0 or later iPhone/iPad
- macOS 10.12 or later Mac/iMac
- Windows 8 or later with Bluetooth HID Profile PC/laptop/tablet
- Android 6.0 or later smartphone

**NOTE:**  
**Not fully compatible with Bluetooth adapter, Mac mini, Samsung Smart TV, and Nokia phones.**

### Power Saving Mode

The keyboard will enter power saving mode after 30 minutes of inactivity, and you can press any key to activate it.

**Note:** there may be a typing delay during the first 3 seconds of waking up.

### Charge the Keyboard

Charge the device with the included USB cable.

--- Output: DC 5V/200mA; **USB charger is not included.**

**NOTE:** do not use a charger with a voltage higher than 7 to charge the keyboard, and the keyboard will stop charging to protect the keyboard.

### Tips

Keep away from oil, chemical, liquid, and snacks.  
Keep away from sharp objects.  
Keep away from metal and other sources of wireless signal.

### Contact

For more questions, please contact us by support@iclever.com

- 7 -

### FAQ

#### Q. Delay when typing, stop working, and frequently get disconnected.

- Restart your Bluetooth device.
- Charge the keyboard for 2 hours.
- Make sure that iClever device and your device are within close proximity of each other.
- Try moving away at least 8 inches from:
  - Any device that could emit wireless waves: Microwave, cordless phone, baby monitor, wireless speaker, garage door opener, WiFi router
  - Computer power supplies, Metal or metal wiring in the wall
- Do not use your wireless keyboard on metal surfaces.
- Check your computer memory, insufficient memory may cause the delay.
- Try on a different APP/device to connect or email us.

#### Q. My keyboard fails to connect .

- Charge the keyboard for 2 hours.
- Make sure that your iClever device and computer are within close proximity of each other.
- Try moving away at least 8 inches (20 cm) from metal and other sources of wireless signal.
- Delete all the Bluetooth connection records.  
(for example, for iPad, click "Settings" > "Bluetooth" > under "MY DEVICE" to delete all the Bluetooth connection records)
- On your device, turn off the Bluetooth and turn it on again to Refresh.  
(For example, for iPad, click "Settings" > "Bluetooth" > if the on-screen switch beside Bluetooth currently shows as ON, tap it twice to refresh it).
- Connect it again.

#### Q. How to fix keyboard typing multiple letters on Windows10?

Click "win" key > Settings > Ease of Access > Keyboard > find "Use Filter Keys", turn it on.

- 8 -

#### Q. How to fix keyboard typing multiple letters on Mac?

- On a Mac, choose the Apple menu > "System Preferences", click "Keyboard", and choose the Keyboard tab.
- Locate the "Key Repeat" slider setting and adjust it to the "Off" position.

### FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the Instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- 9 -



## Clavier sans fil

BK20

## Manuel de l'Utilisateur FR

### Instructions de couplage

Étape 1. Faites glisser l'interrupteur d'alimentation sur « ON » pour allumer le clavier.  
Étape 2. Maintenez et appuyez sur la touche pendant 5 secondes pour accéder au mode d'appairage sur le canal 1/2/3 ; l'indicateur de canal Bluetooth clignotera en bleu et commencera à rechercher le périphérique Bluetooth disponible.  
Étape 3. Sur votre appareil Bluetooth, recherchez le nom Bluetooth «iClever BK20 KB» et cliquez pour le connecter.

\* Bande de fréquence : 2402 MHz-2480 MHz

\* Puissance d'émission maximale : 0 dBm

### IC Caution

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.