



## Wireless Keyboard

BK50

### User Manual (English)

#### Package Contents

1 x Keyboard  
1 x USB-C Charge Cable  
1 x User Manual

#### Specifications

Connection Type	Bluetooth 5.1
Dimensions	298,3*131,1*20,7mm
Connected Devices	Up to 3
Layout Compatibility	Windows/Mac
Lithium Battery Capacity	180 mAh
Charge Time	2 hours (USB-C charge)
Uninterrupted Work Time	> 22 days
Key Life (scissor switch)	5 million clicks
Material	ABS
Frequency Band	2402MHz - 2480MHz
Maximum Transmission Power	0 dBm

#### Compatibility

- ▶ iOS 9.0 or later iPad/iPhone
- ▶ macOS 10.12 or later Mac/iMac
- ▶ Windows 8 or later PC/laptop/tablet
- ▶ Android 6.0 or later Android Smartphone/tablet

**NOTE:**  
Not fully compatible with Bluetooth adapter, Samsung Smart TV, Xbox, and Nokia phones.

- 1 -

#### Product Overview



##### ① Power & Bluetooth Indicator:

- Power indicator: when powering on the keyboard, it will be on for 3 seconds.
- Bluetooth Indicator: press "fn" + "Z", the indicator will flash to Bluetooth pairing mode.

##### ② Caps Lock Indicator:

- press "caps lock" key to switch between uppercase and lowercase letters,
- when the indicator is on, it is uppercase letters.
- Note: the indicator may be off when used in Android.**
- when the indicator is off, it is lowercase letters.

##### ③ Fn Lock Indicator:

- press "fn" + "esc" to activate the fn lock function.
- when the indicator is on, F1-F12 works as F1-F12.
- when the indicator is off, F1-F12 works as multi-media function.

##### ④ Charging Indicator:

- stay in red when charging.
- turn off after fully charged (about 2 hours fully charged).

##### ⑤ Power Switch: slide the power switch to "I" to power it on.

##### ⑥ USB-C Charging Port: for charging.

- 2 -

#### Guide to Use

##### A. How to pair with Bluetooth devices?

###### Pair with the 1st device

- Step 1. Charge the keyboard for 2 hours.
- Step 2. Slide the power switch to power on.
- Step 3. Press "fn" + "Q" to channel 1 and press "fn" + "Z" to Bluetooth pairing mode, and the Bluetooth indicator will keep flashing.
- Step 4. On your Bluetooth device, find the Bluetooth name "iClever BK50 Keyboard" and click to connect it.

###### How to find the Bluetooth Name in different system:

- ▶ For Windows 10: Click Win > Setting > Devices > Bluetooth & other devices > Add Bluetooth or other device > Bluetooth > Click "iClever BK50 Keyboard" to connect.
- ▶ For MacBook: Click System Preferences > Bluetooth > Click "iClever BK50 Keyboard" to connect.
- ▶ For iPad/iPhone: Click Setting > Bluetooth > Click "iClever BK50 Keyboard" to connect.

##### Notes:

- the Bluetooth pairing name may be shown as "Keyboard".
- auto re-connect function: the keyboard will connect with the last-used device automatically.
- do not connect it via a Bluetooth adapter.
- if fail to connect, please read the FAQ.

- 3 -

##### Pair with the 2nd device

- Step 1. Press "fn" + "W" to channel 2 and press "fn" + "Z" to Bluetooth pairing mode, and the Bluetooth indicator will keep flashing.
- Step 2. On your Bluetooth device, find the Bluetooth name "iClever BK50 Keyboard" and click to connect it.

##### Pair with the 3rd device

- Step 1. Press "fn" + "E" to channel 3 and press "fn" + "Z" to Bluetooth pairing mode, and the Bluetooth indicator will keep flashing.
- Step 2. On your Bluetooth device, find the Bluetooth name "iClever BK50 Keyboard" and click to connect it.

##### B. How to switch among the connected devices?

Press "fn" + Q/W/E to switch among the connected devices.

##### C. How to re-pair?

- Step 1. Press "fn" + Q/W/E to choose the channel 1/2/3 you want to re-pair.
- Step 2. Press "fn" + "Z" to re-pair **AGAIN**.

#### Power Saving Mode

The keyboard will enter power saving mode after 30 minutes of inactivity. Press any key to activate it.

**Note: there a delay when wake up the keyboard.**

#### Charge the Keyboard

Charge the device with the included USB cable. Do not charge with a charger with a voltage exceeding 7V. (Output: DC 5V/120mA; **USB charger is not included**)

- 4 -

#### Hot keys and Media Keys

The table below describes special key combinations for different systems.

Function Keys	iPad OS iOS	Mac OS	Android	Windows	Windows Mac OS
Way to use	Press F-Keys	Press F-Keys	Press F-Keys	Press F-Keys	Press fn +
	Brightness -	Brightness -	Brightness -	Brightness - (Windows 10)	F1
	Brightness +	Brightness +	Brightness +	Brightness + (Windows 10)	F2
	Home	Misson Control	Home	Web browser	F3
	N/A for iPhone	Switch apps	N/A	Switch apps	F4
	Search	Search	Search or N/A	Search	F5
	Previous track	Previous track	Previous track	Previous track	F6
	Play/pause	Play/pause	Play/pause	Play/pause	F7
	Next track	Next track	Next track	Next track	F8
	Mute	Mute	Mute	Mute	F9
	Volume -	Volume -	Volume -	Volume -	F10
	Volume +	Volume +	Volume +	Volume +	F11
	Screenshot	Screenshot	Screenshot	Screenshot	F12

\* "Press F-keys" means press F1-F12 keys.  
\* "Press fn + " means press fn and F1- F12 keys.

- 5 -

Special Key	Description
	Press "fn" + "esc" to turn on/off fn lock function. Your keyboard has by default access to the Media and Hotkeys such as Volume Up, Play/Pause, Mute and so on. If you prefer to have direct access to your F-keys simply press
	Press "fn" + "delete" to work as screen lock.
	Press "fn" + "Q" to Bluetooth Channel 1.
	Press "fn" + "W" to Bluetooth Channel 2.
	Press "fn" + "E" to Bluetooth Channel 3.
	Press "fn" + "Z" to Bluetooth pairing, and the indicator will flash.
	It works as "win" when your system is Windows or Android. It works as "option" when your system is iOS or Mac OS.
	It works as "alt" when your system is Windows or Android. It works as "command" when your system is iOS or Mac OS.
	It works as "ctrl" when your system is Windows or Android. It works as "option" when your system is iOS or Mac OS.
	Hidden function: fn + ↑ = page up, fn + ↓ = page down, fn + ← = home, fn + → = end
	The "fn" key is used in combination with other keys to access special features.

- 6 -

#### FAQ

##### Q. Delay when typing, stop working, and frequently get disconnected,

- Restart your device.
- Charge the keyboard for 2 hours.
- Make sure that your iClever device and computer are within close proximity of each other.
- Try moving away at least 8 inches from:
  - Any device that could emit wireless waves: Microwave, cordless phone, baby monitor, wireless speaker, garage door opener, WiFi router
  - Computer power supplies, Metal or metal wiring in the wall
- Do not use your wireless keyboard on metal surfaces.
- Check if there are any updates running in the background.
- Check your computer memory, insufficient memory may cause the delay.
- Try on a different APP/device to connect.

##### Q. My keyboard fails to connect .

- Charge the keyboard for 2 hours.
- If you can not find the "iClever BK50 Keyboard" , it may be shown as a keyboard image, please click this image to connect.
- Make sure that your iClever device and computer are within close proximity of each other.
- Try moving away at least 8 inches (20 cm) from metal and other sources of wireless signal.
- Delete all the Bluetooth connection records. (For example, for iPad, click "Settings" > "Bluetooth" > under "MY DEVICE" to delete all the Bluetooth connection records)
- On your device, turn off the Bluetooth and turn it on again to Refresh. (For example, for iPad, click "Settings" > "Bluetooth" > if the on-screen switch beside Bluetooth currently shows as ON, tap it twice to refresh it.)
- Connect it again.

- 7 -

##### Q. How to fix keyboard typing multiple letters on Mac?

- On a Mac, choose the Apple menu > "System Preferences", click "Keyboard", and choose the Keyboard tab.
- Locate the "Key Repeat" slider setting and adjust it to the "Off" position.

##### Q. How to fix keyboard typing multiple letters on Windows10?

Click win key > Settings > Ease of Access > Keyboard > find "Use Filter Keys", turn it on.

##### Q. Bluetooth device doesn't work after computer wakes from sleep mode in Winows system.

- In the Device Manager, change the Bluetooth wireless adapter power settings: Go to Control Panel > System and Security > System > Device Manager
- In Device Manager, expand Bluetooth Radios, right-click on the Bluetooth wireless adapter (ex. Dell Wireless 370 adapter), and then click Properties.
- In the Properties window, click the Power Management tab and uncheck Allow the computer to turn off this device to save power.
- Click OK.
- Restart your computer to apply the change.

#### Tips

Keep away from oil, chemical, liquid, and snacks. Keep away from sharp objects. Keep away from metal and other sources of wireless signal.

#### Contact

For more questions, please contact us by support@iclever.com

- 8 -

#### FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
---Reorient or relocate the receiving antenna.  
---Increase the separation between the equipment and receiver.  
---Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
---Consult the dealer or an experienced radio/TV technician for help.  
This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### IC Caution

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

- 9 -



## Clavier sans fil

BK50

### Manuel de l'Utilisateur Français

#### Contenu du colis

1 clavier  
1 câble de charge USB-C  
1 manuel d'utilisation

#### Caractéristiques

Type de connexion	Bluetooth 5.1
Dimensions	298,3*131,1*20,7mm
Des appareils connectés	3
Compatibilité de mise en page	Windows/Mac
Capacité de la batterie au lithium	180 mAh
Temps de charge	2 heures (charge USB-C)
Temps de travail ininterrompu	> 22 jours
Matérielle	ABS
Bande de fréquence	2402MHz - 2480MHz
Puissance de transmission maximale	0 dBm

#### Guide d'utilisation

- Étape 1. Chargez le clavier pendant 2 heures.
- Étape 2. Faites glisser l'interrupteur d'alimentation pour allumer.
- Étape 3. Appuyez sur "fn" + "Q" pour canaliser 1/2/3.
- Étape 4. Appuyez sur "fn" + "Z" pour passer en mode d'appairage Bluetooth, et l'indicateur Bluetooth continuera de clignoter.
- Étape 5. Sur votre appareil Bluetooth, recherchez le nom Bluetooth « iClever BK50 Keyboard » et cliquez pour le connecter.