



2.4G+Wireles Dual-Mode Ultra Slim Keyboard

IC-DK03

User Manual

www.iclever.com

Thank you for choosing iClever! Please read this user manual carefully and save it for future reference.

Package Contents


- 1x Wireless Keyboard
- 1x 2.4G USB Receiver (for 2.4G connection only)
- 1x Keyboard Cover
- 1x Micro USB Charging Cable
- 1x User Manual
- 1x Warranty Card

Specifications

Connection	2.4G Wireless or Bluetooth
Operating distance	< 8m / 26ft
Dimensions	428*125*16mm / 16.85 *4.92 *0.63in
Net weight	428g
Lithium battery capacity	280mAh
Charge time	< 2 hours
Uninterrupted working time	90 hours
Stand-by time	90 days
Compatibility	Windows, Mac OS, iOS, Android

-1-

Indicator Lights Description

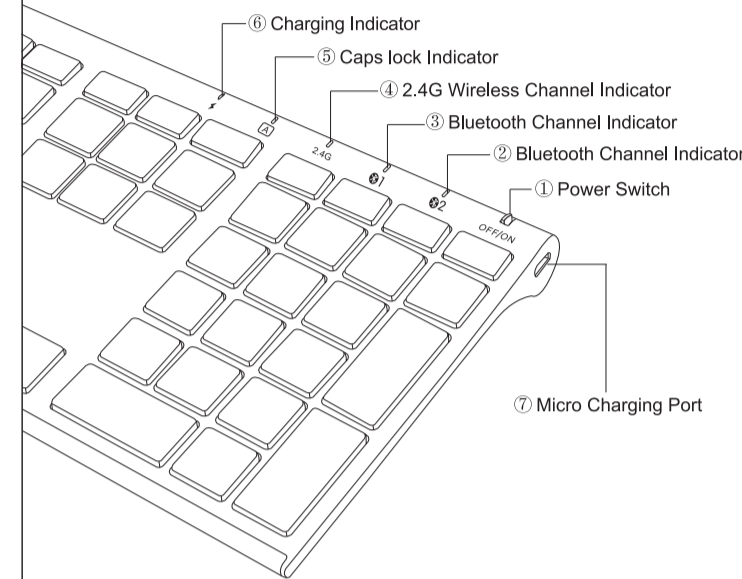

- Power Switch:** slide right to turn on and left to turn off.
- Bluetooth Channel Indicator:** to indicate the Bluetooth channel 1/2.
- 2.4G Wireless Channel Indicator:** turn green for 3s after switching to the 2.4G wireless mode.
- Caps lock Indicator:** press "caps lock" key to switch between uppercase and lowercase. Press "F6" key to check the power reminding, and the indicator light flashes once, twice, three times, and four times to indicate that the power is less than 25%, 50%, 75%, and 100%.
- Charging Indicator:** it stays in red while charging, and turns green when fully charged.

-2-

Pairing Instruction

A. 2.4G Wireless Connection

- Plug the 2.4G USB receiver into the port of the computer.
- Slide power switch right to power on the keyboard.
- Press the key of **[2.4G]** to switch to 2.4G wireless mode, and the indicator will turn green for 3 seconds.
- Press fn + Q/W to choose system (**fn+Q is for iOS and Mac OS, and fn+W is for Windows and Android**)

If the connection fails, please read the FAQ before proceeding as follows:

- Slide left to turn off and then slide right to turn on the keyboard.
- Press the key of **[2.4G]** to switch to 2.4G mode.
- Hold and press keys of **[Esc]** + **[2]** for 5 seconds until the 2.4G indicator quickly flashing green.
- Immediately plug the 2.4G USB receiver into the computer within 10s and keep the keyboard close to the receiver within 30cm (0.98 ft).
- The 2.4G indicator will turn to be green for 2 seconds and then turn off after connection successfully.

NOTE:

- Keep the keyboard off the ground.
- If failed, please repeat the above steps.

B. Bluetooth Wireless Connection

Pair with 1st device

- Slide power switch right to power on the keyboard.
- Hold and press the key of **[01]** for 5 seconds to enter pairing mode in channel 1, and the Bluetooth channel 1 indicator will quickly flash blue and start to search for the available Bluetooth device.

-3-

- On your Bluetooth device, find the Bluetooth name "iClever IC-DK03 KB" and click to connect it.
- The Bluetooth Channel indicator will be off after successfully paired.
- Press "fn" + "Q"/"W" keys to choose the system (**fn+Q is for iOS and Mac OS, and fn+W is for Windows and Android**)

Pair with 2nd device

- Slide right to power on the keyboard.
- Hold and press the key of **[02]** for 5 seconds to enter pairing mode in channel 2, and the Bluetooth channel 2 indicator will quickly flash blue and start to search for the available Bluetooth device.
- On your Bluetooth device, find the Bluetooth name "iClever IC-DK03 KB" and click to connect it.
- The Bluetooth Channel indicator will be off after successfully paired.
- Press "fn" + "Q"/"W" keys to choose the system (**fn+Q is for iOS and Mac OS, and fn+W is for Windows and Android**).

C. Switch among connected devices

Press the key of **[2.4G]** / **[01]** / **[02]** to switch among connected devices.

D. Re-pair the channel that already connected

If you already connect Bluetooth channel 1 or 2 with device A and you want to use device B to re-connect channel 1 or 2, please hold and press the key of **[01]** or **[02]** for 5 seconds to enter pairing mode, and then on your device to find "iClever IC-DK03 KB" to re-connect it.

(If fail to connect, please delete/forget the previous connection records with iClever IC-DK03 KB, and on your device turn off Bluetooth function and turn it on again to re-connect it)

-4-

Keys and Functions

Before to use, please ensure that you already choose the right system: fn + Q is for iOS and Mac OS and fn + W is for Windows and Android. Your keyboard has by default access to the Media and Hotkeys such as Volume Up, Play/Pause, Volume down, and so on. If you prefer to have direct access to your F-keys simply press **[Fn]** on your keyboard to swap them.

Key Icon	iOS	Android	Windows	Mac OS	Windows & Mac OS
Way to use	Press F-keys directly	Press F-keys directly	Press F-keys directly	Press F-keys directly	Press fn+ F1-F12
[F1]	Brightness -	Brightness -	Brightness - (Windows 10)	Brightness -	F1
[F2]	Brightness +	Brightness +	Brightness + (Windows 10)	Brightness +	F2
[F3]	N/A	Home or N/A	Web browser	Mission control	F3
[F4]	Switch apps (not working for iPhone)	Switch apps	Switch apps	Switch apps	F4
[F5]	Search	Search in browser or N/A	Search	Search	F5
[F6]	Battery capacity checking	Battery capacity checking	Battery capacity checking	Battery capacity checking	F6
[F7]	Previous track	Previous track	Previous track	Previous track	F7
[F8]	Play/pause	Play/pause	Play/pause	Play/pause	F8
[F9]	Next track	Next track	Next track	Next track	F9
[F10]	Mute	Mute	Mute	Mute	F10
[F11]	Volume -	Volume -	Volume -	Volume -	F11
[F12]	Volume +	Volume +	Volume +	Volume +	F12

-5-

Special Key	iOS	Android	Windows	Mac OS
Way to use	Press directly	Press directly	Press directly	Press directly
[Fn]	Screen lock	Screen lock or N/A	Screen lock	Screen lock
[2.4G]	Switch function: press this key to switch to 2.4G mode.			
[01]	Switch function: press this key to switch to Bluetooth channel 1. Pairing function: hold and press this key for 5 seconds and the Bluetooth channel 1 indicator will quickly flash blue and start to search for the available Bluetooth device.			
[02]	Switch function: press this key to switch to Bluetooth channel 2. Pairing function: hold and press this key for 5 seconds and the Bluetooth channel 2 indicator will quickly flash blue and start to search for the available Bluetooth device.			
[Fn Lock]	Fn lock function: press this key to swap between the F-keys(F1-F12) and Media and Hotkeys on F-Keys.			
[Q]	If your system is Mac and iOS, press fn+ this key switching to Mac OS and iOS.			
[W]	If you system is Windows and Android, press fn + this key switching to Windows and Android.			
[Win]	It works as "win" when your system switch to Windows. It works as "option" when the system switch to iOS or Mac OS.			
[Cmd]	It works as "alt" when your system switch to Windows or Android. It works as "cmd" when your system switch to iOS or Mac OS.			
[Enter]	It works as input method change. (It works for Win10, iOS, and Mac OS only)			
[Num Lock]	It works as "number lock" when your system switch to Windows. Note: Press this key to activate number lock function, and after activation, the function keys under the numeric keyboard can be used. It works as "clear" when your system switch to Mac OS.			

-6-

Sleep Mode

The keyboard will enter sleep mode if idle for 30 minutes. Press any key to exit sleep mode.

Charging the Keyboard

It is recommended to use our included charging cable to directly connect with the computer interface. If you prefer to connect the charging cable with an adapter, before to use, please check your adapter voltage is lower than 5V. ---- Output: DC 5V/200mA; **USB charger is not included.** ---- In the charging, the indicator will stay in red while charging, and it will light up green when fully charged. Generally, it takes about 2 hours to get fully charged.

FAQs

Q: Is this keyboard fully compatible with Macbook/iMac?

A: No, it is not fully compatible. The keys of **[Fn]** **[Esc]** **[F12]** are not working for Macbook and iMac.

Q: Is this keyboard fully compatible with iPhone/iPad?

A: No, it is not fully compatible. The keys of **[Fn]** **[Esc]** **[F12]** are not working for iPhone and iPad.

-7-

Q: How to enable direct access to F-keys or how to make F1-F12 keys work correctly.

A: Your keyboard has by default access to the Media and Hotkeys such as Volume Up, Play/Pause, Volume down, and so on. If you prefer to have direct access to your F-keys simply press key of **[Fn]** on your keyboard to swap them.

Q: My keyboard fails to connect by 2.4G mode.

- Ensure you already press the key of **[2.4G]**.
- Verify the product or receiver is connected directly to the computer and not to a hub, extender, switch, or something similar.
- Charge keyboard for 30 minutes.
- Move the receiver to a different USB port on your computer.
- Try on a different computer.
- Read above "Pairing Instruction" to re-pair your keyboard.

Q: My keyboard fails to connect by Bluetooth mode.

- Ensure the device you are trying to pair with is Bluetooth wireless-capable.
- Delete/remove previous Bluetooth connection record and turn off the Bluetooth function on your devices and turn it on again.


- Ensure you already hold and press the button of **[01]** / **[02]** for 5 seconds until the indicator flashing blue.
- Charge the keyboard for 30 minutes.
- Try a different device.

Q: Delay typing in Win 10

- Use Windows shortcut keys **Win + R** to open Run.
- Type into **control** and hit the **Enter** key. This will launch **Control Panel**. **(Note: If you cannot type into the proper letters, it is recommended to use the on-screen keyboard.)**
- View by Small icons. Click the **Keyboard**.

-8-

- In Keyboard Properties, adjust the slider of Repeat delay to an appropriate situation that is close to **Long**. Adjust the slider of Repeat rate to an appropriate situation that is close to **Slow**.

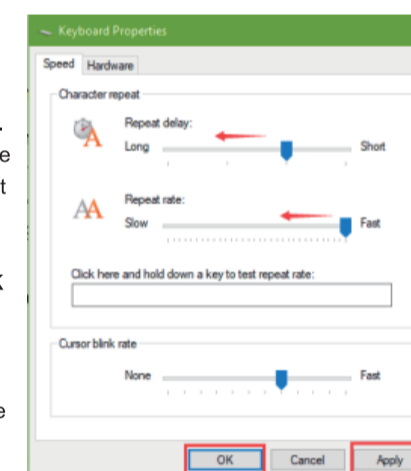

- Click the **Apply** and the **OK** button to save the changes. Restart the computer and try typing a word to see if the double or multiple letters issue still persists.

Q: Troubleshooting for connection issues: keyboard frequently get disconnected, keyboard get laggy when typing, key gets stuck or responds intermittently, device connection drops, device cannot be connected at all.

Troubleshooting Checklist

- Restart your Bluetooth device.
- Make sure that your iClever device and computer are within close proximity of each other.
- Try moving away at least 8 inches (20 cm) from metal and other sources of wireless signal. Try moving away from:
 - Any device that could emit wireless waves: Microwave, cordless phone, baby monitor, wireless speaker, garage door opener, WiFi router
 - Computer power supplies
 - Metal or metal wiring in the wall

-9-

- Do not use your wireless keyboard on metal surfaces.
- Charge your iClever keyboard for 30 minutes. Low battery power can adversely affect connectivity and overall functionality.
- Check if there are any updates running in the background that may cause the delay.
- Make sure your operating system (OS) is up to date.
- Try on a different computer/smartphone/tablet.

If the problem still persists, you will need to contact us follow specific steps based on your device operating system.

Contact

Your feedback is important to us. If you have any questions, please contact us by support@iclever.com

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-10-

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

-11-