



## Foldable Wireless Keyboard

IC-BK06 SE

### User Manual


#### Package Contents

- 1 x Wireless Foldable Keyboard
- 1 x USB-C Charging Cable
- 1 x Stand Holder for Smartphone
- 1 x User Manual

#### Specifications

Bluetooth Specification	Bluetooth 5.1
Dimensions (open)	334.42*104.58*6.7 mm
Weight	175 ± 5g
Connection Devices	up to 3
Power	USB-C Charging/ 60 hours
Material	ABS + PU
Frequency Band	2402MHz-2480MHz
Maximum Transmission Power	0 dBm

#### Indicator Lights Description

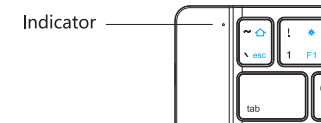

- Charging Status:** stay in green when charging and turn off when fully charged.
- Power Status:** unfold the keyboard to power on, and the indicator will be on for 3s.
- Pairing Status:** keep flashing (press "fn" + "Z" keys to pairing mode).

#### Pairing Instruction

##### A. How to pair with 3 devices?

###### Pairing with the 1st device

- Step 1. Charge the keyboard for 2 hours.
- Step 2. Unfold the keyboard to turn on.
- Step 3. Press "fn" + "Q" keys to choose Bluetooth channel 1.
- Step 4. Press "fn" + "Z" keys to pairing mode; the indicator will flash.
- Step 5. On your device, find the Bluetooth name "iClever IC-BK06 SE" and click to connect it.

###### Pairing with the 2nd device

- Step 1. Press "fn" + "W" keys to choose Bluetooth channel 2.
- Step 2. Press "fn" + "Z" keys to pairing mode; the indicator will flash.
- Step 3. On your device, find the Bluetooth name "iClever IC-BK06 SE" and click to connect it.

###### Pairing with the 3rd device

- Step 1. Press "fn" + "E" keys to choose Bluetooth channel 3.
- Step 2. Press "fn" + "Z" keys to pairing mode; the indicator will flash.
- Step 3. On your device, find the Bluetooth name "iClever IC-BK06 SE" and click to connect it.

##### Notes:

1. Auto re-connect function: when you turn on the keyboard, it will connect with the last-used device automatically.
2. If the connection fails, please delete all the pairing records from your device; turn off your device's Bluetooth function and turn it on again to refresh; follow the pairing instruction to connect again.

##### B. How to switch among 3 connected devices?

Press "fn" + "Q/W/E" keys to switch among connected devices.

##### C. How to re-pair a channel that has already been connected?

- Step 1. Press "fn" + "Q/W/E" keys to choose the Bluetooth channel 1/2/3 you want to re-pair again.
- Step 2. Press "fn" + "Z" keys to pairing mode again.
- Step 3. On your device, find the Bluetooth name "iClever IC-BK06 SE" and click to connect it.

#### Compatibility

- \* iOS/iPadOS 13.0 or later iPhone/iPad
- \* macOS 10.15 or later Mac
- \* Windows 8 or later PC/laptop
- \* Android 6.0 or later Smartphone
- \* **This keyboard is not compatible with Bluetooth adapter, Samsung Smart TV, Mac mini, iPad mini 5, Xbox, and Nokia phones.**

#### Power Saving Mode

The keyboard will enter sleep mode after being idle for 10 minutes. To activate it, press any key and wait for 3 seconds.

#### Charge the Keyboard

- \* Please charge the keyboard with computer USB port directly. Do not charge the keyboard with chargers above 5V. (**Output: DC 5V/80mA; USB charger is not included.**)
- \* In charging, the power indicator will turn green. Generally, it takes about 2 hours for a full charge.

#### Keys and Function

The table below describes special key combinations for different operating systems.

Function Keys	iOS	Android	Windows 10	Mac OS	Windows or Mac OS
Way to use	Press fn +	Press fn +	Press fn +	Press fn +	Press fn + shift +
	Home	Home or N/A	Web Browser	Mission Control	esc
	Brightness -	Brightness -	Brightness -	Brightness -	F1
	Brightness +	Brightness +	Brightness +	Brightness +	F2
	N/A	N/A	Switch Apps	Switch Apps	F3
	Search	Search or N/A	Search	Search	F4
	Previous Track	Previous Track	Previous Track	Previous Track	F5
	Play/Pause	Play/Pause	Play/Pause	Play/Pause	F6
	Next Track	Next Track	Next Track	Next Track	F7
	Mute	Mute	Mute	Mute	F8
	Volume -	Volume -	Volume -	Volume -	F9
	Volume +	Volume +	Volume +	Volume +	F10
	Screen Capture	Print Screen or N/A	Print Screen	Print Screen	F11
	Screen Lock	Screen Lock or N/A	Screen Lock	Screen Lock	F12
	Forward Delete	Delete	Delete	Forward Delete	N/A

Special Keys	Descriptions
	The fn key is used in combination with other keys to access special features.
	Press fn + this key to choose Bluetooth Channel 1.
	Press fn + this key to choose Bluetooth Channel 2.
	Press fn + this key to choose Bluetooth Channel 3.
	Press fn + this key to Bluetooth pairing mode.
	Press [fn] + [page up] to work as page up.
	Press [fn] + [page down] to work as page down.
	Press [fn] + [home] to work as home.
	Press [fn] + [end] to work as end.

#### Keyboard Language Switching

iOS 9 or above: ctrl + space  
Windows 10: command + space or alt + shift / caps Lock  
Android: ctrl + space / shift + space/ others  
**Note: the above way may not work in all android devices.**

#### FAQ

##### Q: My keyboard fail to connect / stop working.

1. Charge the keyboard for 2 hours.
2. Make sure that your iClever device and computer are within close proximity of each other.
3. Try moving away at least 8 inches (20 cm) from metal and other sources of wireless signal.
4. Delete all the Bluetooth connection records. (For example, for iPad, click "Settings" > "Bluetooth" > under "MY DEVICE" to delete all the Bluetooth connection records)
5. On your device, turn off the Bluetooth and turn it on again to Refresh. (For example, for iPad, click "Settings" > "Bluetooth" > if the on-screen switch beside Bluetooth currently shows as ON, tap it twice to refresh it)
6. Connect it again or email us.

##### Q: Delay when typing, stop working, and frequently get disconnected.

1. Restart your Bluetooth device.
2. Charge the keyboard for 2 hours.
3. Make sure that your iClever device and computer are within close proximity of each other.
4. Try moving away at least 8 inches from:
  - Any device that could emit wireless waves: Microwave, cordless phone, baby monitor, wireless speaker, garage door opener, WiFi router
  - Computer power supplies, Metal or metal wiring in the wall
5. Do not use your wireless keyboard on metal surfaces.
6. Check if there are any updates running in the background.
7. Check your computer memory, insufficient memory may cause the delay.
8. Try on a different APP/device to connect or email us.

##### Q: Is this waterproof?

No, it is not waterproof.

#### Tips

Keep away from oil, chemical, liquid, and snacks.  
Keep away from sharp objects.  
Keep away from metal and other sources of wireless signal.

#### FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### Contact

If you have any questions, please free to contact us by support@iclever.com.