



## 2.4G Keyboard and 2.4G Mouse Combo

IC-GK03

## User Manual

### Package Contents

1 x 2.4G Keyboard  
1 x 2.4G Mouse  
1 x USB-C Charging Cable  
1 x USB Receiver (**stored at the bottom of the mouse**)  
1 x User Manual

### Specification of Keyboard


|                            |                        |
|----------------------------|------------------------|
| Connection Type            | 2.4G USB Wireless      |
| Layout Compatibility       | Windows & Mac          |
| Power Sources              | 280mAh Lithium Battery |
| Charge Time                | 2 hours / USB-C Charge |
| Uninterrupted Work Time    | 45 Days                |
| Frequency Band             | 2402MHz-2480MHz        |
| Maximum Transmission Power | 0 dBm                  |
| Material                   | Aluminum + ABS         |

### Specification of Mouse

|                            |                              |
|----------------------------|------------------------------|
| Connection Type            | 2.4G USB Wireless            |
| Power Source               | 300mAh Lithium Battery       |
| Charge Time                | 2 hours / USB-C Charge       |
| Uninterrupted Work Time    | 20 Days                      |
| DPI                        | 800-1200-1600(1200 default ) |
| Frequency Band             | 2405MHz-2470MHz              |
| Maximum Transmission Power | 0 dBm                        |


-1-

### Product Overview

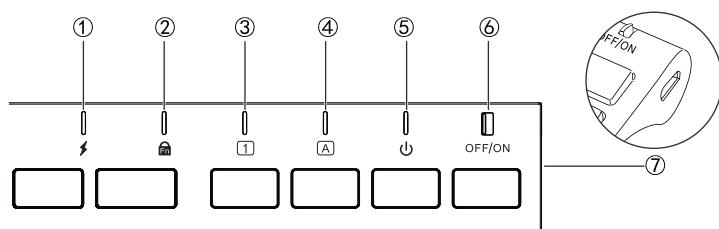

- ①**Charging Indicator:**  
stay in red while charging and turn green after fully charging.
- ②**Fn lock Indicator:**  
press “fn” + “esc” key to turn on/off the Fn lock function.  
When the indicator is on, the F1~F12 keys function as multimedia keys, such as mute, volume up, play/pause, etc.
- ③**Number Lock Indicator:**  
press the “numlk” key to turn on/off the number lock function (does not work for Mac).  
When the indicator is on, the numeric keypad works as numbers.
- ④**Caps Lock Indicator:**  
press the “caps lock” key to turn on/off the caps lock function.  
When the indicator is on, it works in uppercase.
- ⑤**Power Indicator:**  
the indicator will be on for 3 seconds when the keyboard is turned on.
- ⑥**Power Switch:** slide the OFF/ON switch to turn the keyboard on/off.
- ⑦**Charging Port:** for charging only.

-2-

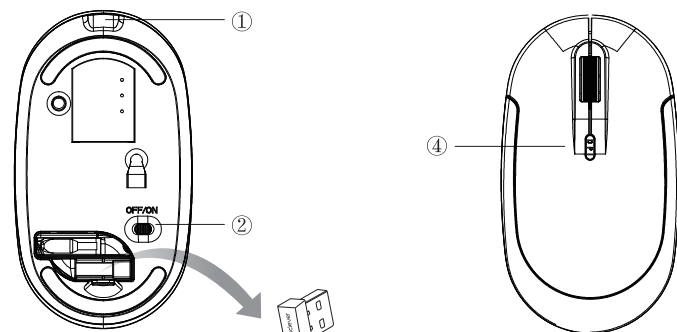

- ③ **USB Receiver**
- ①**USB-C Charging port:** for charging.  
②**Power Switch OFF/ON:** slide OFF/ON to turn the mouse off/on.  
③**USB Receiver:** remove the mouse cover to get the USB receiver.  
④**DPI Switch:** press this button to change the slider sensitivity.  
3 adjustable DPI are available (800,1200,1600).

### Device Requirements

PC/laptop Windows 7/8/10 or later  
macOS 10.13 or later with USB-A port Mac/iMac  
Note:  
---Not fully compatible with Mac mini, Samsung smart TV and XBOX.  
---If your MacBook has a USB-C port, please connect it via a hub, extender, or something similar.

-3-

### Pairing Instruction

- For Windows PC/laptop USB-A port users:**  
Step 1. Remove the USB receiver from the bottom cover of the mouse.  
Step 2. Connect the USB receiver to your computer.  
Step 3. Slide the mouse OFF/ON switch to “ON” to turn on.  
Step 4. Slide the keyboard OFF/ON switch to “ON” to turn it on.  
Step 5. Press “fn” + “W” to Windows layout, and ready to use.
- For MacBook / iMac with USB-A port users:**  
Step 1. Remove the USB receiver from the bottom cover of the mouse.  
Step 2. Connect the USB receiver to your Mac.  
note: if your Mac is USB-A port, a hub is required to plug.  
Step 3. Slide the mouse OFF/ON switch to “ON” to turn on.  
Step 4. Slide the keyboard’s OFF/ON switch to “ON” to turn it on.  
Step 5. Press “fn” + “Q” to Mac layout, and ready to use.

- Note:**  
---Only a USB receiver is included and works with both keyboard and mouse.  
---The keyboard has default as Windows layout.  
---When you restart the keybord, the keyboard will back to Windows Layout.  
---The USB receiver is a USB-A port and is not compatible with USB-C ports.  
---If connection fails:  
①Charge the keyboard and mouse for about 2 hours.  
②Check whether the product or receiver is connected directly to the computer and not to a hub, extender, switch, or something similar.  
③Change different computer USB ports for connection.

-4-

### Keys and Functions

Before to use, please choose your right system by pressing “fn”+ “Q” to Mac layout and “fn”+ “W” to Windows layout.

| Function Keys       | Windows Media         | Windows F-Keys        | Mac OS Media       | Mac OS F-Keys         |
|---------------------|-----------------------|-----------------------|--------------------|-----------------------|
| <b>Guide to use</b> | <b>Press “fn”+</b>    | <b>Press directly</b> | <b>Press “fn”+</b> | <b>Press directly</b> |
| F1                  | Brightness - (win 10) | F1                    | Brightness -       | F1                    |
| F2                  | Brightness + (win 10) | F2                    | Brightness +       | F2                    |
| F3                  | Web browser           | F3                    | Mission Control    | F3                    |
| F4                  | App Switch            | F4                    | App Switch         | F4                    |
| F5                  | Search                | F5                    | Search             | F5                    |
| F6                  | Previous Track        | F6                    | Previous Track     | F6                    |
| F7                  | Play/pause            | F7                    | Play/pause         | F7                    |
| F8                  | Next Track            | F8                    | Next Track         | F8                    |
| F9                  | Mute                  | F9                    | Mute               | F9                    |
| F10                 | Volume -              | F10                   | Volume -           | F10                   |
| F11                 | Volume +              | F11                   | Volume +           | F11                   |
| F12                 | Screenshot            | F12                   | Screenshot         | F12                   |

-5-

| Special Keys | Descriptions   |
|--------------|--|
|              | Your keyboard has by default access to the F-keys(F1~F12). If you prefer to have direct access to your media and hotkeys such as mute, volume up, play/pause, and so on, simply press “fn” + “esc” to activate fn lock function on your keyboard to swap them. |
|              | Press keys of “fn”+ “Q”, the system will switch to Mac OS.   |
|              | Press keys of “fn”+ “W”, the system will switch to Windows.  |
|              | The “fn” key is used in combination with other keys to access special features.  |
|              | It works as “win” when system is switched to Windows; it works as “option” when system is switched Mac OS.   |
|              | It works as “alt” when system is switched to Windows; it works as “cmd” when system is switched to Mac OS.   |
|              | It works as “alt gr” when system is switched to Windows; it works as “cmd” when system is switched to Mac OS.  |
|              | It works as “ctrl” when system is switched to Windows; it works as “option”, when system is switched to Mac OS.  |
|              | It works as “number lock” when system is switched to Windows; it works as “clear” when system is switched to Mac OS.   |

### Charge the Keyboard/Mice

Charge the keyboard/mouse with the included charging cable.  
Note:  
---The output is DC 5V/200mA. Do not use a USB charger higher than 7V to charge your device.  
---USB charger is not included.

-6-

### Gray Keys

Gray Keys are **used for Mac OS users.**  
Before to use, please press change the input method to **British** (not PC-British). You can press ctrl+space keys to change the input method.

| Gray Key | Mac OS | Gray Key | Mac OS |
|----------|--------|----------|--------|
|          | §      | Shift+   | ±      |
|          | \      | Shift+   |        |
| Shift+   | @      | +        | €      |
| +        | #      | Shift+   | “      |
|          | `      | Shift+   | ~      |

Note: means to press this key directly. Shift + related key means press shift and related keys simultaneously.

### Tips

Keep away from oil, chemical, liquid, and snacks.  
Keep away from sharp objects.  
Keep away from metal and other sources of wireless signal.

### Contact

For more questions, please contact us by support@iclever.com

-7-

### FAQ

- Stop working, Keyboard/Mice keys do not work correctly.**  
---Charge the keyboard/mice for 2 hours.  
---Verify the product or receiver is connected directly to the computer and not to a hub, extender, switch or something similar.  
---Unpair/repair or disconnect/reconnect hardware.  
---Try on a different USB port / computer.
- Delay when typing.**  
---Restart your computer.  
---Charge the keyboard for 2 hours. Low battery power can adversely affect connectivity and overall functionality.  
---Verify the product or receiver is connected directly to the computer and not to a hub, extender, switch or something similar.  
---Move the keyboard closer to the USB receiver. If your receiver is in the back of your computer, it may help to relocate the receiver to a front port. In some cases the receiver signal gets blocked by the computer case, causing a delay.  
---Keep other electrical wireless devices away from the USB receiver to avoid interferences.  
---Check if there are any updates running in the background that may cause the delay.

**Can't find the USB Receiver.**  
The USB receiver is located on the bottom of the mouse. You can access it by removing the cover.  
Only one USB receiver is included for both keyboard and mouse.

**Doesn't hold a charge.**  
---change a USB port to charge.  
---if you charge the keyboard by charger, please ensure the voltage is not higher than 7V (the keyboard will stop charging if the voltage is higher than 7V).

-8-

**What is the compatibility with MacBook Air, MacBook Pro, Mac Mini and iMac?**  
USB Receiver is a USB-A port.  
For some Mac devices are USB-C port only.  
---USB Receiver is compatible with iMac 21.5" (Intel,2017,2019), iMac Pro (Intel,2017), Mac mini (M2 or M2 Pro), Mac mini (Intel, 2018), Mac mini (M1, 2020)  
---Not compatible with MacBook Air/Pro, iMac (M1, Two ports), iMac (M1, four ports), Mac Pro(Intel, 2019), Mac Pro, Mac Studio.  
Note: a hub/extender or USB-A to USB-C adapter is required to connect with USB-C port Mac devices.

Hereby, [Thousandshores Deutschland GmbH] declares that the radio equipment type [2.4G Keyboard, IC-GK03] is in compliance with Directive 2014/53/EU.  
The full text of the EU declaration conformity is available at the following internet address:  
<http://files.iclever.com/ic-gk03-eu-doc.pdf>

Hiermit erklärt [Thousandshores Deutschland GmbH], dass der Funkanlagentyp [2.4G Keyboard, IC-GK03] der Richtlinie 2014/53/EU entspricht.  
Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:  
<http://files.iclever.com/ic-gk03-de-doc.pdf>

Learn more about the UK Declaration of Conformity, please check below link to download:  
<http://files.iclever.com/ic-gk03-uk-doc.pdf>

-9-