



2.4G Keyboard and 2.4G Mouse Combo

IC-GK03

User Manual

Thank you for choosing iClever! Please read this user manual carefully and save it for future reference.

Package Contents

- 1 x 2.4G Keyboard
- 1 x 2.4G Mouse
- 1 x Silicone Keyboard Cover
- 1 x USB-C Charging Cable
- 1 x USB Receiver (stored at the bottom of the mouse)
- 1 x User Manual

Specification of Keyboard

Dimensions	366 x 125 x 16.2 mm / 14.4 x 4.9 x 0.64 in
Operating Range	< 10 m / 32.8 ft
Charge Time	< 2 hours
Uninterrupted Work Time	90 hours
Key Life	3 million clicks
Stand-by Time	90 days

*Frequency band: 2405 MHz-2470 MHz
 *Maximum transmission power: 0 dBm

 
Specification of Mouse

Dimensions	107.5 x 60 x 27.5 mm / 4.23 x 2.36 x 1.08 in
Operating Range	<10 m / 32.8 ft
Button Life	3 million clicks
DPI	800-1200(default)-1600
Power Source	2 X AAA batteries (not included)

*Frequency band: 2405 MHz-2470 MHz
 *Maximum transmission power: 0 dBm

-1-


Product Overview for Keyboard

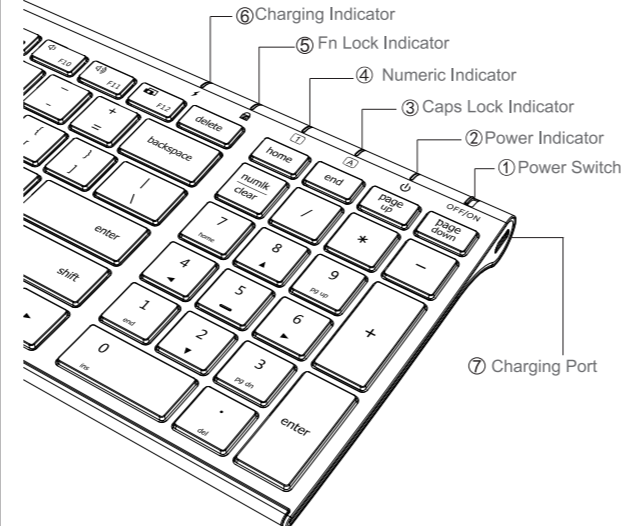

- Power Switch:** move right to turn on and left to turn off the keyboard.
- Power Indicator:** the indicator will be on for 3s when power on the keyboard.
- Caps Lock Indicator:** press "caps lock" key to turn on/off the caps lock function. When the indicator is on, works as uppercase.
- Numeric Indicator:** press "numlk" key to turn on/off the number lock function (not work for Mac). When the indicator is on, the numeric keypad works as numbers.
- Fn Lock Indicator:** press "fn" + "esc" keys to turn on/off the fn lock function. When the indicator is on, F1-F12 works as F1-F12.
- Charging Indicator:** stay in red when charging and turn green after fully charged.
- Charging Port:** for charging.

-2-

 Mouse:

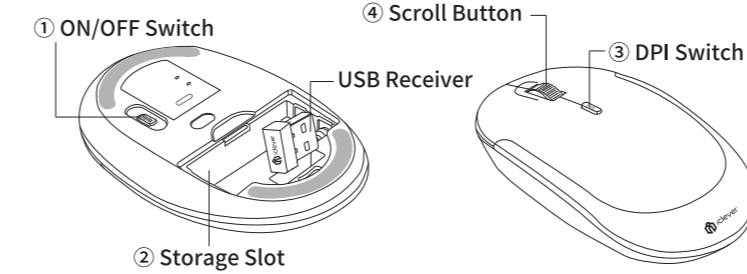

- ON/OFF Switch:** slide ON/OFF to turn on/off the mouse.
- Storage Slot:**
 - used to hold two AAA batteries (not included)
 - used to store the USB Receiver (USB Receiver is stored here).
- DPI Switch:** 3 adjustable dpi (800, 1200, 1600) are available. Press DPI Switch to change the mouse's sensitivity.
- Scroll Button:** for scrolling.

Device Requirements

Windows 7,8,10 or later
 macOS 10.13 or later with USB-A port

Note:

- It is not fully compatible with Mac mini, smart TV and XBOX.
- If your MacBook is USB-C port, please connect it by a hub, extender or something similar.

Sleep Mode

 
The keyboard and mouse will enter sleep mode for power saving if idle for 10 minutes. Press any key and wait for 3s to exit sleep mode.

-3-

Pairing Instructions

For Windows users:

- Charge the keyboard for 2 hours.
- Remove the USB Receiver (both works for keyboard and mouse) from the bottom of mouse and insert two AAA batteries into the Storage Slot (AAA batteries are not included).

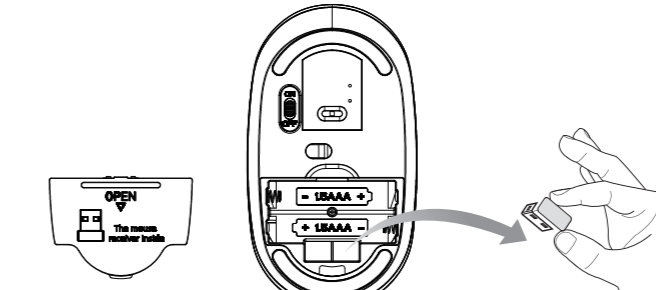

- Move the mouse ON/OFF Switch to "ON" to power on.
- Plug the USB Receiver into the USB-A port of the computer.
- Move the keyboard power switch to "ON" to power on.
- Press "Fn" + "W" to Windows layout.

For Mac OS users:

- Remove the USB Receiver from the bottom of mouse and insert two AAA batteries into the slot (AAA batteries are not included).
- Move the mouse OFF/ON Switch to "ON" to power on.
- Plug the USB Receiver into the USB-A port of the computer or a hub.

NOTE: if your Mac is USB-C port, please connect it by a hub.

- Move the keyboard power switch to "ON" to power on.
- Press "Fn" + "Q" to Mac layout (MacBook / iMac).
- NOTE: if you restart the keyboard, the keyboard would be back to Windows Layout.

-4-

Keys and Functions

For all the media keys work as normal, please based on your system to choose Windows/Mac layout (If your system is Mac OS, please press "fn" + "Q").

Function Keys	Windows Media	Windows F-Keys	Mac OS Media	Mac OS F-Keys
F1	Brightness - (win 10)	F1	Brightness -	F1
F2	Brightness + (win 10)	F2	Brightness +	F2
F3	Web browser	F3	Mission Control	F3
F4	App Switch	F4	App Switch	F4
F5	Search	F5	Search	F5
F6	Previous Track	F6	Previous Track	F6
F7	Play/pause	F7	Play/pause	F7
F8	Next Track	F8	Next Track	F8
F9	Mute	F9	Mute	F9
F10	Volume -	F10	Volume -	F10
F11	Volume +	F11	Volume +	F11
F12	Screenshot	F12	Screenshot	F12

-5-

Special Keys	Descriptions
	Your keyboard has by default access to the media and hotkeys such as mute, volume up, play/pause, and so on. If you prefer to have direct access to F-keys simply press "fn" + "esc" to activate fn lock function to swap them.
	Press keys of "fn" + "Q" to choose Mac layout.
	Press keys of "fn" + "W" to choose Windows layout.
	It works as "win" when your system is Windows; it works as "option" when your system is Mac OS.
	It works as "alt" when your system is Windows; it works as "cmd" when your system is Mac OS.
	It works as "ctrl" when your system is Windows; it works as "option" when your system is Mac OS.
	It works as "number lock" when your system is Windows; it works as "clear" when your system is Mac OS.

Tips

- Keep away from oil, chemical, liquid, and snacks.
- Keep away from sharp objects.
- Keep away from metal and other sources of wireless signal.

Contact

If you have any questions, please contact us by support@iclever.com.

-6-

FAQ

Dejar de funcionar o retrasarse al escribir

- Reinicie su PC/portátil y el teclado iClever.
- Verifique que el producto o receptor esté conectado directamente a la computadora y no a un concentrador, extensor, conmutador o algo similar.
- Acerque el dispositivo al receptor USB. Si su receptor está en la parte posterior de su computadora, puede ser útil reubicarlo en un puerto frontal. En algunos casos, la señal del receptor queda bloqueada por la carcasa de la computadora, lo que provoca un retraso.
- Mantenga otros dispositivos eléctricos inalámbricos alejados al menos a 8 pulgadas del receptor USB para evitar interferencias, como parlantes inalámbricos, fuentes de alimentación de computadoras, monitores, etc.
- Cargue el teclado durante 2 horas y reemplace las baterías AAA nuevas del mouse.
- Verifique la memoria de su computadora; la memoria insuficiente puede causar el retraso.

Q. How to fix keyboard typing multiple letters on Windows 10?

Click win key > Settings > Ease of Access > Keyboard > find "Use Filter Keys", turn it on.

Q. How to fix keyboard typing multiple letters on Mac?

- On a Mac, choose the Apple menu > "System Preferences", click "Keyboard", and choose the Keyboard tab.
- Locate the "Key Repeat" slider setting and adjust it to the "Off" position.

Q. Cursor does not follow mouse movements.

- Use a mouse pad.
- Avoid using your mouse on: Glass and other see-through surfaces, Reflective surfaces, such as mirrors and metal desks, and grooved surfaces.
- Try the mouse on a piece of white paper to make sure it isn't a tracking issue on the particular surface you're using.

-7-

Q. Miss the USB Receiver.

- The USB Receiver is located at the bottom of the mouse storage Slot. Please open the cover to get the USB Receiver.
- Only one USB Receiver is included and both works for the keyboard and mouse.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

-8-



Ensemble clavier 2.4G et souris 2.4G

IC-GK03

Manuel de l'Utilisateur FR

Guide d'utilisation

- Étape 1. Chargez le clavier pendant 2 heures.
- Étape 2. Retirez le récepteur USB du bas de la souris et insérez deux piles AAA dans le Emplacement de stockage (les piles AAA ne sont pas incluses).
- Étape 3. Déplacez l'interrupteur ON/OFF de la souris sur « ON » pour allumer.
- Étape 4. Branchez le récepteur USB sur le port USB-A de l'ordinateur.
- * Si votre appareil est un port USB-C, veuillez le connecter par un hub.
- Étape 5. Déplacez l'interrupteur d'alimentation du clavier sur « ON » pour allumer.
- Étape 6. Terminé, prêt à l'emploi.

IC Caution

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

*Bande de fréquence : 2405MHz-2470MHz
 *Puissance d'émission maximale : 0 dBm