

**Wireless Keyboard**

**BK09**

**User Manual**


**Package Contents**

- 1 x Tri-folding Wireless Keyboard
- 1 x USB-C Charging Cable
- 1 x Stand Holder for Smartphone and Tablet
- 1 x User Manual

**Specifications**

Connectivity	Bluetooth 5.1
Key Numbers	82
Dimensions-open	327.00*91.7*11.78 mm
Dimensions-fold	184.95*94.90*17.25 mm
Weight	About 210g
Connected Devices	Up to 3
Compatibility	iOS/Android/Windows/Mac
Power	210 mAh / 2 hours charge
Uninterrupted Work Time	> 60 Hours
Sleep Time	30 Minutes
Material	ABS
Key Structure	Scissor Switch
Frequency Band	2402MHz-2480MHz
Maximum Transmission Power	0 dBm

**Indicator Lights Description**

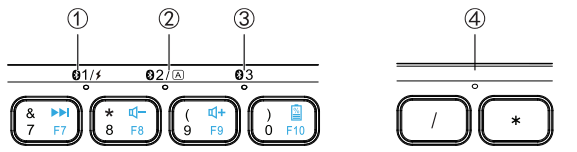

① **Bluetooth 1 & Charge Indicator**  
Bluetooth 1 Indicator: hold and press "fn" + "Q" for 5s to pairing mode in channel 1, the indicator keeps flashing in 180s.  
Charge Indicator: stay in red when charging and turn green when fully charged.

② **Bluetooth 2 & Caps Lock Indicator**  
Bluetooth 2 Indicator: hold and press "fn" + "W" for 5s to pairing mode in channel 2, the indicator keeps flashing in 180s.  
Caps Lock Indicator: press the "caps lock" key to switch between uppercase and lowercase.  
When the indicator is on, works as uppercase letters.  
When the indicator is off, works as lowercase letters.

③ **Bluetooth 3 Indicator**  
Hold and press "fn" + "E" for 5s to pairing mode in channel 3, the indicator keeps flashing in 180s.

④ **Number Lock Indicator**  
When the indicator is on, the numeric keypad works as function under the numbers, like ins, del, home, end, page up and page down.  
When the indicator is off, the numeric pad works as numbers.

**Battery Check:** press "fn" + "F10" to check the battery status, ①②③ will flash. Each flash represents 25% power remaining, and there are 4 flashes in total.  
**Power Indicator:** power on the keyboard, ①②③ will be on for 3s.

**Pairing Steps**

**A. How to pair with Bluetooth devices?**

**Pairing with the 1st device**  
Step 1. Unfold the keyboard to power on.  
Step 2. Press "fn" + "Q" for 5s to Bluetooth Channel 1.  
Step 3. Hold and press "fn" + "Q" for 5s to Bluetooth pairing mode, and the indicator will keep flashing.  
Step 4. On your device, find the name "iClever BK09 Keyboard" and click to connect it.

**Pairing with the 2nd device**  
Step 1. Press "fn" + "W" to choose Bluetooth Channel 2.  
Step 2. Hold and press "fn" + "W" for 5s to Bluetooth pairing mode, and the indicator will keep flashing.  
Step 3. On your device, find the name "iClever BK09 Keyboard" and click to connect it.

**Pairing with the 3rd device**  
Step 1. Press "fn" + "E" to choose Bluetooth Channel 3.  
Step 2. Hold and press "fn" + "E" to Bluetooth pairing mode, and the indicator will keep flashing.  
Step 3. On your device, find the name "iClever BK09 Keyboard" and click to connect it.

**How to find BK09 in different system:**

- ▶ For iOS (iPad/iPhone) and Android: Click Setting > Bluetooth > Click "iClever BK09 Keyboard" to connect.
- ▶ For Windows 10: Click Win > Setting > Devices > Bluetooth & other devices > Add Bluetooth or other device > Bluetooth > Find "iClever BK09 Keyboard" to connect.
- ▶ For Mac (MacBook/Mac): Click System Preferences > Bluetooth > Click "iClever BK09 Keyboard" to connect.

**Notes:**

- The Bluetooth pairing name may appear as a keyboard icon.
- If fail to connect, please remove the "iClever BK09 Keyboard" name from your Bluetooth list. Turn off your Bluetooth and turn on it again to refresh.
- Keep the keyboard and your Bluetooth device in 30cm in Bluetooth pairing.
- each channel can pair with 1 device (3 channels in total).
- auto re-connect function: the keyboard will connect with the last-used device automatically.
- do not connect it via a Bluetooth adapter.

**B. How to switch between connected devices?**  
Press "fn" + "Q/W/E" keys to switch between connected devices.

**C. How to re-pair a channel that has already connected?**  
Step 1. Press "fn" + "Q/W/E" to choose the Bluetooth channel 1/2/3 that you want to re-pair.  
Step 2. Hold and press "fn" + "Q/W/E" for 5s to Bluetooth mode AGAIN to re-pair.

**Keys and Function**

System	iOS	Android	Windows	Windows
Guide to Use	Press Fn + (F1-F12) keys	Press Fn + (F1-F12) keys	Press Fn + (F1-F12) keys	Press Fn + Shift + (F1-F12) keys
Esc	Esc	Esc	Esc	N/A
Home	Home	Home	Web browser	F1
Brightness -	Brightness -	Brightness -	Brightness + (Windows 10)	F2
Brightness +	Brightness +	Brightness +	Brightness + (Windows 10)	F3
Search	N/A	Search	Search	F4
Previous track	Previous track	Previous track	Previous track	F5
Play/pause	Play/pause	Play/pause	Play/pause	F6
Next track	Next track	Next track	Next track	F7
Volume -	Volume -	Volume -	Volume -	F8
Volume +	Volume +	Volume +	Volume +	F9
Battery check	Battery check	Battery check	Battery check	F10
Screenshot	Screenshot	Screenshot	Screenshot	F11
Screen lock	Screen lock	N/A	N/A	F12
Virtual Keyboard	N/A	N/A	N/A	N/A

**FAQ**

**Q: Keyboard stop working / fail to connect.**

1. Charge the keyboard for 2 hours.
2. Make sure that your iClever device and computer are within close proximity of each other (30cm).
3. Try moving away at least 8 inches (20cm) from metal and other sources of wireless signal.
4. Delete all the Bluetooth connection records.  
(For example, for iPad, click "Settings" > "Bluetooth" > under "MY DEVICE" to delete all the Bluetooth connection records)
5. On your device, turn off the Bluetooth and turn it on again to Refresh.  
(For example, for iPad, click "Settings" > "Bluetooth" > if the on-screen switch beside Bluetooth currently shows as ON, tap it twice to refresh it).
6. Connect it again.

**Q: Delay when typing.**

1. Restart your Bluetooth device.
2. Charge the keyboard for 2 hours.
3. Make sure that your iClever device and computer are within close proximity of each other.
4. Try moving away at least 8 inches from:  
—any device that could emit wireless waves: Microwave, cordless phone, baby monitor, wireless speaker, garage door opener, WiFi router  
—Computer power supplies, Metal or metal wiring in the wall
5. Do not use your wireless keyboard on metal surfaces.
6. Check if there are any updates running in the background.
7. Check your device memory, insufficient memory may cause the delay.
8. Try on a different APP/device to connect.

**Q: Numeric keypad work incorrectly.**  
Press "num lock" to turn on/off the number lock function, when the indicator is off, numeric keypad works as numbers, like 0 1 2 3 4 5 6 7 8 9.


**FCC Statement**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
— Reorient or relocate the receiving antenna.  
— Increase the separation between the equipment and receiver.  
— Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
— Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Contact**  
For more questions, please contact us by support@iclever.com.

.1. .2. .3. .4. .5. .6. .7.



**ワイヤレスキーボード**

**BK09**

**取扱説明書**

**パッケージ内容**

- 1 x ワイヤレスキーボード
- 1 x Type-C式充電ケーブル
- 1 x スマートフォン/タブレット用スタンド
- 1 x 取扱説明書

**キーボード仕様**

Bluetoothバージョン	Bluetooth 5.1
キー数	82
展開寸法	327.00*91.7*11.78 mm
折りたたみ寸法	184.95*94.90*17.25 mm
重さ	約210g
接続可能なデバイス数	3
対応システム	iOS/Android/Windows/Mac
電源	210 mAh / 2 時間充電
連続使用時間	> 60 時間
スリープモードに入る時間	30 分間
材質	ABS
キー機構	バタグラブ式
周波数帯域	2402MHz-2480MHz
最大送信電力	0 dBm

**インジケーター**



① **インジケーター:**  
Bluetoothランプ: 「fn」+「Q」を5秒間押し続けると、Bluetoothチャネル1に入り、Bluetoothランプが素早く青色に点滅します。  
充電ランプ: 充電中は赤に点灯します。充電完了になると緑に点灯します。

② **インジケーター:**  
Bluetoothランプ: 「fn」+「W」を5秒間押し続けると、Bluetoothチャネル2に入り、Bluetoothランプが素早く青色に点滅します。  
キャプスロックランプ: 「shift」+「caps lock」を押すと大文字と小文字を切り替えられます。インジケーターがオンの場合、大文字として動作します。インジケーターがオフの場合、小文字として動作します。

③ **インジケーター:**  
Bluetoothランプ: 「fn」+「E」を5秒間押し続けると、Bluetoothチャネル3に入り、Bluetoothランプが素早く青色に点滅します。

④ **インジケーター:**  
Numlockランプ: 「numlock」を押すと、テンキーの役割が代わります。インジケーターがオフの場合、テンキーは数字として機能します (Androidではオンの場合があります)。  
インジケーターがオンの場合、テンキーは数字の下の機能として動作します。

**ご注意:**  
キーボードを左右を広げて電源を入れると、①②③インジケーターが 3 秒間青く点灯します。  
▶ 「fn」+「F10」を押すと、①②③インジケーターが青色で点滅し、バッテリー残量を確認できます。1/2/3/4回点滅はそれぞれ25%/50%/75%/100%のバッテリー残量を示します。

**ペアリングの説明**

**デバイスのペアリング①**

1. キーボードを左右を広げて電源をオンにしてください。
2. Bluetoothチャネル1に入るため、「fn」+「Q」のキーを押してください。
3. インジケーター①が素早く青く点滅するまで、「fn」+「Q」のキーを5秒間押し続けてください。
4. お使いのデバイスのBluetooth機能を有効にし、接続可能なデバイスを探します。検索画面に「iClever BK09 Keyboard」が表示されたら、クリックして接続してください (接続されると、Bluetoothランプが消灯します)。

**デバイスのペアリング②**

1. Bluetoothチャネル2に入るため、「fn」+「W」のキーを押してください。
2. インジケーター②が素早く青く点滅するまで、「fn」+「W」のキーを5秒間押し続けてください。
3. お使いのデバイスのBluetooth機能を有効にし、接続可能なデバイスを探します。検索画面に「iClever BK09 Keyboard」が表示されたら、クリックして接続してください (接続されると、Bluetoothランプが消灯します)。

**デバイスのペアリング③**

1. Bluetoothチャネル3に入るため、「fn」+「E」のキーを押してください。
2. インジケーター③が素早く青く点滅するまで、「fn」+「E」のキーを5秒間押し続けてください。
3. お使いのデバイスのBluetooth機能を有効にし、接続可能なデバイスを探します。検索画面に「iClever BK09 Keyboard」が表示されたら、クリックして接続してください (接続されると、Bluetoothランプが消灯します)。

**異なるシステムのキーボードと接続**

- ▶ iPhone/iPad/Android: ホームから「設定」→「Bluetooth」→「iClever BK09 Keyboard」をクリックして接続します。
- ▶ Windows 10: 「スタート」→「設定」→「デバイス」→「Bluetooth」とその他のデバイス→「Bluetooth」またはその他のデバイスを追加する→「Bluetooth」→「iClever BK09 Keyboard」をクリックして接続します。


▶ MacBook/iMac  
「アップルメニュー」→「システム設定」→「Bluetooth」→「iClever BK09 Keyboard」をクリックして接続します。

**ご注意:**

- ▶ 本製品には最大 3 つのデバイスのペアリングができます。「fn」+ Q/W/E を押して、切り替えます。
- ▶ 接続されたデバイスの間の切り替えるときは、「fn」+ Q/W/E を5秒間押し続けなくてもいい押し続けた場合、再度ペアリングモードに入ります。
- ▶ 各 Bluetooth チャネルは1つのデバイスのみペアリングできます。
- ▶ 自動接続機能: キーボードの電源をオンスると、最後に使用したデバイスと自動的に接続します。
- ▶ ペアリングに失敗した場合は、下記の手順に従って操作してください。
- 1. お使いのデバイスのBluetooth接続履歴を削除してください。
- 2. お使いのデバイスのBluetoothをオフにした後、再度オンにしてください。
- 3. 上記の「デバイスのペアリング」を再度お試しください。

**バランススタンド**

キーボードのバランスをとるためのバランススタンドが付属しています。

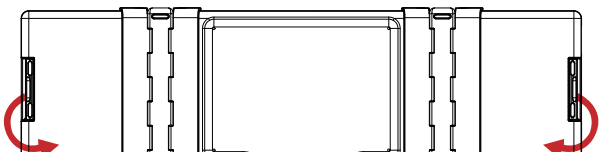

**充電の説明**

充電する場合はキーボードを付属の充電ケーブルと接続し、もう一端をパソコンポートに接続することをおすすめします。充電ケーブルをアダプターに接続する場合、使用前に、アダプターの電圧が5Vより低いことを確認してください (アダプターの電圧が5Vより高く、キーボードが電池保護モードに入り、充電できない場合があります)。

- ▶ 出力電圧: DC 5V/200mA
- ▶ USBチャージャーは同梱されていません。

**キーボード機能**

システム	iOS	Android	Windows 10	Windows
使用方法	fn+を押す	fn+を押す	fn+を押す	fn+shiftを押す
Esc	Esc	Esc	Esc	N/A
ホーム	ホーム	ブラウザのホームページ	ブラウザのホームページ	F1
バックライトを暗くする	バックライトを暗くする	バックライトを暗くする	バックライトを暗くする	F2
バックライトを明るくする	バックライトを明るくする	バックライトを明るくする	バックライトを明るくする	F3
検索	N/A	検索	検索	F4
前のトラック	前のトラック	前のトラック	前のトラック	F5
再生 / 一時停止	再生 / 一時停止	再生 / 一時停止	再生 / 一時停止	F6
次のトラック	次のトラック	次のトラック	次のトラック	F7
音量を下げる	音量を下げる	音量を下げる	音量を下げる	F8
音量を上げる	音量を上げる	音量を上げる	音量を上げる	F9
バッテリー残量確認	バッテリー残量確認	バッテリー残量確認	バッテリー残量確認	F10
スクリーンショット	スクリーンショット	スクリーンショット	スクリーンショット	F11
ロックスクリーン	ロックスクリーン	N/A	N/A	F12
キーボードディスプレイ	N/A	N/A	N/A	N/A

**FAQ**

**Q:キーボードと接続できない。**  
ステップ1. 下記の手順に従って操作してください。  
1. デバイスを再起動してください。  
2. キーボードを30分程度充電してください。  
3. Bluetoothのペアリング名はキーボードのアイコンの形式で表示される場合があります。Bluetoothのペアリング名の中で新しく表示されたキーボードのアイコンを見つけ、クリックして接続してください。  
4. お使いのデバイスのBluetooth接続履歴「iClever BK09 Keyboard」を削除してください。削除後、お使いのデバイスを再起動してください。  
5. お使いのデバイスのBluetoothをオフにした後、再度オンにしてください。  
6. お使いのデバイスとキーボードの距離をできる限り近づけてください (30cm以内)  
7. ご使用の際に周囲の金属やその他のワイヤレス信号源から遠ざけてください。  
ステップ2. デバイスのペアリングに従って再接続してください。

**Q:入力の遅延が起こる。または、頻繁にBluetoothデバイスとの接続を切断される。**

1. お使いのデバイスを再起動してください。
2. お使いのデバイスとキーボードの距離をできる限り近づけてください (30cm以内)
3. ご使用の際に周囲の金属やその他のワイヤレス信号源から遠ざけてください。  
(例) 以下のものから遠ざけるようにしてください。  
---無線電波を放出するデバイス (電子レンジ、コードレス電話、ベビーモニター等)  
---コンピュータの電源  
---強いWiFi信号  
---金属または壁内の金属配線
4. 金属でできた机の上でキーボードを使用しないでください。
5. キーボードを30分程度充電してください (バッテリー残量が少なくない、接続性と全体的な機能に悪影響が出る場合があります)。
6. 遅延の原因となる更新プログラムがバックグラウンドで実行されていないかを確認してください。
7. オペレーティングシステム (OS) が最新であることを確認してください。
8. 同様の問題が起こるが、別のコンピュータ/スマートフォン/タブレットで接続と入力をお試しください。

**Q:ボタンを押すと、入力と出力一致しないなどの問題が発生します。**  
Windows/Mac/Android:  
英語 (US) 入力の場合のみ、入力と出力が同じになります。  
日本語を入力する際、以下の場合入力と出力が一致しない可能性があります。  
1. shift+2,6,7,8,9,0,=を入力する場合。  
2. [ ] , ; / を入力する場合。  
iOS (iPhone/iPad):  
iOSはデフォルトの英語入力になっており、入力も出力も同じです。

**対応システム**

- ▶ iOS 13.0以降のiPhone/iPad
- ▶ Mac (注: Mac miniとは互換性が悪く、接続できない、または一部機能が使用できないなどの問題が発生する可能性があります。)
- ▶ Windows 8/10/11 のPCとLaptop (注: Bluetooth機能必要があります。)
- ▶ Android 6.0以降のスマートフォン/タブレット
- 注: 一部のBluetoothアダプター、Samsung Smart TV、Nokia phones、Linuxデバイス、その他の不明な新しいAndroidデバイス、及び低いBluetoothバージョンのAndroidデバイスとは互換性がありません。

**製品を安全にご使用いただくために**

- ▶ キーボードを損傷するような鋭利なものを近づけないでください。
- ▶ キーボードの上に重いものを置かないでください。
- ▶ キーボードの上にコーヒーやお茶などの液体を漏さないでください。

**製品サポート**  
iCleverのホームページでは、ユーザー登録や製品の最新情報、最新のトラブルシューティング等を提供いたしますので、ぜひご利用ください。  
www.iclever.co.jp

**カスタマーサポート**  
Eメール: support@iclever.co.jp

.1. .2. .3. .4. .5. .6. .7.