iClever

Wireless Keyboard and Wireless Mouse Combo

BK23 Combo

User Manual


Package Contents

1*Keyboard, 1*Mouse, 1*USB-C Charging Cable, 1*User Manual

Specifications

Product	Wireless Keyboard
Connection Type	Bluetooth 5.1
Connected Devices	Up to 3
Compatibility	PC/laptop/Tablet/Smartphone
Layout Compatibility	Windows/Mac
Keyboard Power Sources	280 mAh / 2 Hours (USB-C charge)
Working Time	About 45 Days
Material	Aluminum + ABS
Frequency Band	2402MHz-2480MHz
Maximum Transmission Power	0 dBm

Product	Wireless Mouse
Connection Type	Bluetooth 5.0
Connected Deivces	3
DPI	800-1200-1600-2400
Lithium battery capacity	300 mAh / 2 Hours Charge
Working time	About 20 Days
Material	ABS
Frequency Band	2403MHz-2480MHz
Maximum Transmission Power	0 dBm

-1-

Keyboard Overview
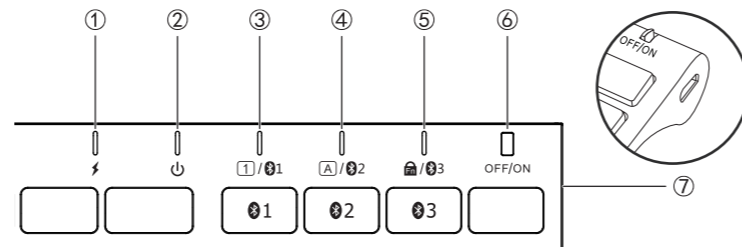
①Charging Indicator:
● stay in red when charging.
● turn green after fully charged (about 2 hours).
②Power / Battery Check Indicator:
● the indicator will be on for 3s when powering on the keyboard.
● press "fn" + "F6" (Windows/Android users) or "F6" (iOS/Mac users) to check the battery (each flash represents 25% battery).
③Number Lock / Bluetooth Channel 1 Indicator:
the number lock indicator defaults to on (green), and the numeric keypad works as numbers. Press "num lock" to turn on/off the number lock function.
④Caps Lock / Bluetooth Channel 2 Indicator:
press "caps lock" to switch between uppercase and lowercase, when the indicator is on(green), works as uppercase.
⑤Fn Lock / Bluetooth Channel 3 Indicator:
press "fn" + "esc" to turn on/off Fn lock function, when the indicator is on, for Windows users, F1~F12 works as Multi-media funtions keys.
⑥Power Switch: slide the power switch to ON/OFF to turn on/off.
⑦USB-C Charging Port: for charging.

-2-

Mouse Overview

Scroll Button
Left Button
Forward Button
Backward Button
Right Button
DPI Button
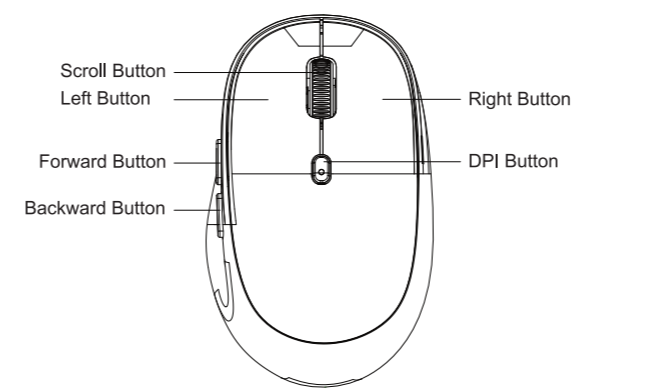
① Bluetooth 1/2/3 Indicator
② Connect Button:
---Click this button once to choose Bluetooth 1/2/3 channel (each channel can pair with 1 device).
---Hold and press this button for 5s to Bluetooth pairing mode, and the indicator will keep flashing.
③ ON/OFF Switch: slide "ON" / "OFF" to power on/off the mouse.

Note:
*Backward and forward buttons are not working in iOS and Mac OS.
*Only the left and right buttons are silently clicked.

-3-

Keyboard Pairing Instruction

Pair with the 1st device

Step 1. It is recommended to charge the keyboard for 2 hours.
Step 2. Slide the power switch to "ON" to power on the keyboard.
Step 3. Press 🔘1 key once to choose channel 1. Hold and press this key for 5 seconds to pairing mode, and the indicator will keep falshing.
Step 4. On your Bluetooth device, fnd the name "iClever Bluetooth Keyboard" and click to connect it.

Guide to find iClever pairing name in different system:

► For Windows 10 PC/laptop:
Click Win > Setting > Devices > Bluetooth & other devices > Add Bluetooth or other device > Bluetooth > Click "iClever Bluetooth Keyboard" to connect.
► For MacBook/iMac:
Click System Preferences > Bluetooth > Click "iClever Bluetooth Keyboard" to connect.
► For iPad/iPhone:
Click Setting > Bluetooth > Click "iClever Bluetooth Keyboard" to connect.

Pair with the 2nd device

Step 1. Press 🔘2 key once to choose channel 2. Hold and press this key for 5 seconds to Bluetooth pairing mode, and the indicator will keep flashing.
Step 2. On your Bluetooth device, fnd the name "iClever Bluetooth Keyboard" and click to connect it.

Pair with the 3rd device

Step 1. Press 🔘3 key once to choose channel 3. Hold and press this key for 5 seconds to Bluetooth pairing mode, and the indicator will keep flashing.
Step 2. On your Bluetooth device, fnd the name "iClever Bluetooth Keyboard" and click to connect it.

-4-

Note:
---each Bluetooth channel can pair with 1 device.
---press 🔘1 / 🔘2 / 🔘3 key to switch between the conncted device.
---hold and press 🔘1 / 🔘2 / 🔘3 key for 5s to re-pair again.
---the keyboard will automatically connect back to the last one.
---keep the keyboard with your Bluetooth device as close as possible.
---the pairing name may be shown as **keyboard icon** in Windows.

Mouse Pairing Instruction

Pair with the 1st device

Step 1. It is recommended to charge the mouse for 2 hours.
Step 2. Slide the power switch to "ON" to power on the mouse.
Step 3. On the bottom of the mouse, click the "Connect" button to choose Bluetooth channel 1. Hold and press "connect" button for 5s to Bluetooth pairing, and the indicator will keep flashing.
Step 4. On your Bluetooth device, find the name "iClever Mouse" and click

Pair with the 2nd device

Step 1. Click the "Connect" button to choose Bluetooth channel 2. Hold and press "connect" button for 5s to Bluetooth pairing, and the indicator will keep flashing.
Step 2. On your Bluetooth device, find the name "iClever Mouse" and click to connect it.

Pair with the 3rd device

Step 1. Click the "Connect" button to choose Bluetooth channel 3. Hold and press "connect" button for 5s to Bluetooth pairing, and the indicator will keep flashing.
Step 2. On your Bluetooth device, find the name "iClever Mouse" and click to connect it.

-5-

Note:
---each Bluetooth channel can pair with 1 device.
---press "connect" button to switch between the conncted device.
---hold and press "connect" button or 5s to re-pair again.
---the mouse will automatically connect back to the last one.
---keep the mouse with your Bluetooth device as close as possible.
---the pairing name may be shown as **mouse icon** in Windows.

System Requirements

► iOS 9.0 or later
► macOS 10.12 or later
► Windows 8/10/11 or later with Bluetooth HID Profile
► Android 6.0 or later
NOTE: not fully compatible with Windows 7 PC/laptop , Bluetooth adapter, Samsung Smart TV, and Nokia phones.

Power Saving Mode

The keyboard will enter power saving mode after 30 minutes of inactivity. Press any key and wait for 3 seconds to activate it.
Note: there a delay in typing when wake up the keyboard.

Charge the Keyboard and mouse

Charge the device with the included USB cable.
---Output: DC 5V/200mA;
--USB charger is not included.
---Do not use a charger with a voltage higher than 5V to charge the keyboard, the keyboard will stop charging for protection.

-6-

Keys and Functions

The table below describes special key combinations for different operating systems.

Function Keys	iOS/Mac	Android	Windows	Mac	Windows
Way to use	Press directly	Press fn +	Press fn +	Press fn +	Press directly
☼ F1	Brightness -	Brightness -	Brightness - (Win 10)	F1	F1
☼ F2	Brightness +	Brightness +	Brightness + (Win 10)	F2	F2
⌂ F3	Home+iOS Misson Control -Mac	Home	Web browser	F3	F3
⌨ F4	Switch Apps N/A-iPad	N/A	Switch Apps	F4	F4
🔍 F5	Search	N/A	Search	F5	F5
🔋 F6	Battery Check	Battery Check	Battery Check	F6	F6
◁ F7	Previous track	Previous track	Previous track	F7	F7
▷ǁ F8	Play/pause	Play/pause	Play/pause	F8	F8
▷ǀ F9	Next track	Next track	Next track	F9	F9
🔇 F10	Mute	Mute	Mute	F10	F10
🔉 F11	Volume -	Volume -	Volume -	F11	F11
🔊 F12	Volume +	Volume +	Volume +	F12	F12

-7-

Special Key	Description
esc	Press "fn" + "esc" keys to turn on/off fn lock function. Your keyboard has by default access to the F-keys. If you prefer to have direct access to Media and Hotkeys such as Volume Down, Volume Up, Play/Pause, and so on, simply press "fn" + "esc" keys to swap them.
fn	The "fn" key is used in combination with other keys to access special features.
🔘1	Switch Channel: press this key to Bluetooth Channel 1. Pairing function: hold and press it for 5 seconds, the Bluetooth Channel 1 indicator will flash blue to pairing mode.
🔘2	Switch Channel: press this key to Bluetooth Channel 2. Pairing function: hold and press it for 5 seconds, the Bluetooth Channel 2 indicator will flash blue to pairing mode.
🔘3	Switch Channel: press this key to Bluetooth Channel 3. Pairing function: hold and press it for 5 seconds, the Bluetooth Channel 3 indicator will flash blue to pairing mode.
▦	It works as calculator function when your system is Windows. **NOTE: works for Windows only.**
⊞	It works as "win" when your system is Windows. It works as "option" when your system is iOS or Mac OS.
⎇	It works as "alt" when your system is Windows or Android. It works as "command" when your system is iOS or Mac OS.
num lock	It works as "number lock" when your system is Windows. It works as "clear" when your system is Mac. **NOTE: not works for iOS.**
🔒	It works as screen lock when your system is Windows/Mac/iOS.
⊕	It works as input method change. **NOTE: works for Windows 10, iOS, Mac only.**

-8-

FAQ

Q. Fails to connect or stop working.
1. Charge the keyboard for 2 hours.
2. Make sure that your iClever device and computer are within close proximity of each other.
3. Try moving away at least 8 inches (20 cm) from metal and other sources of wireless signal.
4. Delete all the Bluetooth connection records.
(For example, for iPad, click "Settings" > "Bluetooth" > under "MY DEVICE" to delete all the Bluetooth connection records)
5. On your device, turn off the Bluetooth and turn it on again to Refresh.
(For example, for iPad, click "Settings" > "Bluetooth" > if the on-screen switch beside Bluetooth currently shows as ON, tap it twice to refresh it)
6. Connect it again.

Q. Delay/laggy when typing or frequently get disconnected.
1. Restart your Bluetooth device.
2. Charge the keyboard for 2 hours.
3. Make sure that your iClever device and computer are within close proximity of each other.
4. Try moving away at least 8 inches from:
---- Any device that could emit wireless waves: Microwave, cordless phone, baby monitor, wireless speaker, garage door opener, WiFi router
---- Computer power supplies, Metal or metal wiring in the wall
5. Do not use your wireless keyboard on metal surfaces.
6. Check if there are any updates running in the background.
7. Check your computer memory, insufficient memory may cause the delay.
8. Try on a different APP/device to connect.

-9-

Q. How to fix keyboard typing multiple letters on Mac?
1. On a Mac, choose the Apple menu > "System Preferences", click "Keyboard", and choose the "Keyboard tab.
2. Locate the "Key Repeat" slider setting and adjust it to the "Off" position.

Q. How to fix keyboard typing multiple letters on Windows10?
Click win key > Settings > Ease of Access > Keyboard > find "Use Filter Keys", turn it on.

Q. Is this keyboard fully compatible with Mac/iPhone/iPad?
No, it is not fully compatible.
prtscn / scrlk / pause / 🖩 / insert are not working Mac/iPhone/iPad.

Q. Cursor does not follow mouse movements.
1. Use a mouse pad
2. Avoid using your mouse on: Glass and other see-through surfaces, Reflective surfaces, such as mirrors and metal desks, and grooved surfaces.
3. Try the mouse on a piece of white paper to make sure it isn't a tracking issue on the particular surface you're using.

Tips

Keep away from oil, chemical, liquid, and snacks.
Keep away from sharp objects.
Keep away from metal and other sources of wireless signal.

Contact

For more questions, please contact us by support@iclever.com

-10-

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
---- Reorient or relocate the receiving antenna.
---- Increase the separation between the equipment and receiver.
---- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
---- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Importer Information

-11-